

Installation Manual

BKH 5.0 Panorama
45-65-45-65

green

©2024

BRUNNER®

CONTENTS

1	Basic informations.....	3
2	Safety precautions.....	3
3	Specified symbols.....	4
4	Delivery contents BKH Panorama 45-65-45-65.....	6
4.1	BKH Panorama: Heat protection panel = standard.....	8
4.2	Catalytic converter (optional).....	8
5	Safety distances BKH Panorama.....	10
6	Installation.....	12
6.1	Setting up.....	12
6.1.1	Remove the transport locks.....	13
6.1.1.1	BKH Panorama ST (lifting door).....	13
6.2	Fitting: catalytic converter.....	13
6.3	Fitting: deflection.....	16
6.4	Variants Combustion chamber lining.....	19
6.4.1	Chamotte inner lining.....	19
6.5	Variants heat exchanger.....	20
6.5.1	MAS.....	20
6.5.1.1	Components MAS modular top-mount storage SET 440.....	20
6.5.1.2	Fitting: MAS modular top-mount storage SET 440.....	21
6.6	Variant: Mounting bracket - wide frame.....	24
6.7	Variant: EOS.....	25
6.7.1	Bottom cover Air box EOS.....	25
6.7.1.1	Components EOS.....	25
6.7.1.2	Fitting: EOS.....	26
6.7.1.3	Air position indicator Panorama.....	27
6.7.2	Thermocouple.....	28
6.7.2.1	Components Thermocouple.....	28
6.7.2.2	Fitting: Thermocouple.....	28
6.7.2.3	Membrane feed-through.....	30
6.7.3	Door contact switch.....	31
6.7.3.1	Components Door contact switch.....	31
6.7.3.2	Fitting: Door contact switch.....	32
7	Disposal.....	35
8	Technical data.....	36

1 BASIC INFORMATION



All instructions delivered with products must be observed. We do not accept any warranty claim or liability for damage resulting from failure to observe these installation instructions!
Improper installation can cause injury and material damage!

The floor space of the room must have a suitable structure and sufficient dimensions to ensure proper functioning of the fireplace.

Please note that other installation and assembly instructions are included in other packaging units!

Dimensioning of downstream heat accumulator must be according to valid stove-setting rules.

During installation of the fireplace, all dimensions and minimal clearances of the fireplace casing must be held as specified by the manufacturer.

All binding national or EU standards and local regulations for the installation of fireplaces must be observed.

All valid stove fitting rules and regulations of local construction law must be observed and followed.

Please follow the relevant regulations of your country.

When these instructions are followed and all works are done properly, this will ensure a safe, energy-saving and environmentally friendly operation of the stove. Pictures shown are not to be considered as complete representations of any kind.

Subject to technical and assortment changes.

Please notify your supplier of any damage which might have occurred during transport.

Please keep these instructions.

Please also take note of the online product documentation provided by:



[General instructions of the Brunner products installation for the stove construction.](https://www.brunner.de/produktdownloads/kachelofen-kamine/allgemeine-hinweise-fuer-den-aufbau_de.pdf)

(https://www.brunner.de/produktdownloads/kachelofen-kamine/allgemeine-hinweise-fuer-den-aufbau_de.pdf) laden können.



2 SAFETY PRECAUTIONS

Fireplaces may be set up only in rooms or areas with no risk of danger due to their location, structure or intended use.

Working on the stove

Installation, commissioning, servicing and maintenance works on the product may be carried out only by an authorized stove-fitter. Safety and efficiency of the system depend on this!

Working with electronics

Switch off the emergency switch or circuit breaker, and secure them against switching on again.



Fireplaces with external air supply are not independent from room air supply and must be considered and designed as roomsealed fireplaces. In connection with a ventilation or extraction system, we recommend the use of a negative pressure safety device (Art.No.: 11600.1).

Installation must be carried out by an authorized stove-fitter, because safety and efficiency of the system depend mostly on proper installation of the product. All valid stove fitting rules and regulations of building law must be observed and followed. Make sure to instruct the owner or user about the functions and controls of the system and possibly installed safety devices.

Fireplaces must be built to ensure safe operation and fire safety in order to eliminate possible risks and unacceptable loads. They have to be ready for use over an adequate period of time.

Make sure to instruct the owner or user about the functions and controls of the system and possibly installed safety devices.

Remember to use only genuine replacement parts.

3 SPECIFIED SYMBOLS

In this documentation, a distinction is made between:

Operating personnel as the **User of the system**, i.e. the end user, which has received instructions from the Contractor and does not necessarily have additional qualifications.

Operating personnel as the **Contractor**, i.e. the qualified professionals, which are entitled to perform the indicated specialist works.

In this document, the following symbols are used:



DANGER

A danger of high risk persists, which leads to severe injury or death, if this endangering situation is not avoided.

WARNING

A danger of medium risk persists, which can lead to severe injury or death, if this endangering situation is not avoided.

CAUTION

A danger of low risk persists, which can lead to minor or moderate injury, if this endangering situation is not avoided.



ATTENTION

There is a certain risk, which can lead to a malfunction or damage of the related system and all devices connected with it, if the indicated notifications are not followed.




NOTE

Additional helpful information

4 DELIVERY CONTENTS BKH PANORAMA 45-65-45-65


BKH Panorama 45-65-45-65 with lifting door

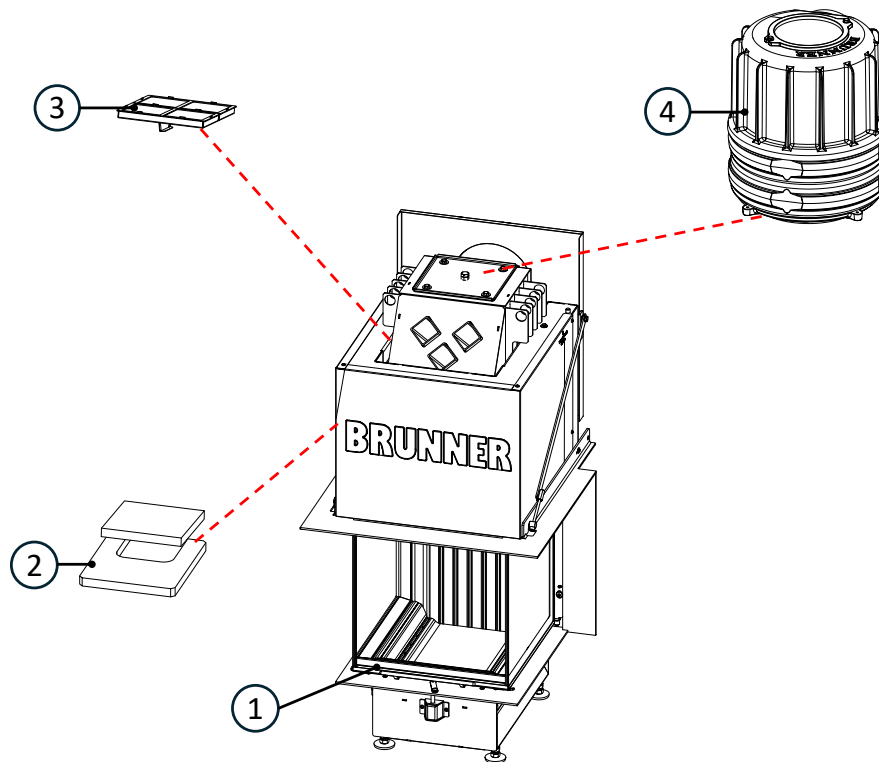

Pos.	Designation	Art. No.
1	BKH - variants:	
	BKH 5.0 Panorama 45-65-45-65 with manual operation, with Ceramic glass (GK), Chamotte inner lining (FR) with Mounting bracket	HK051002-01
	BKH 5.0 Panorama 45-65-45-65 with manual operation, with Ceramic glass (GK), Chamotte inner lining (FR) with wide frame	HK051002-05
	BKH 5.0 Panorama 45-65-45-65 with manual operation, with Glass ceramic coated (GKB), Chamotte inner lining (FR) with Mounting bracket	HK051002-03
	BKH 5.0 Panorama 45-65-45-65 with manual operation, with Glass ceramic coated (GKB), Chamotte inner lining (FR) with wide frame	HK051002-07
	BKH 5.0 Panorama 45-65-45-65 for EAS/EOS with Ceramic glass (GK), Chamotte inner lining (FR) with Mounting bracket	HK051002-02
	BKH 5.0 Panorama 45-65-45-65 for EAS/EOS with Ceramic glass (GK), Chamotte inner lining (FR) with wide frame	HK051002-06
	BKH 5.0 Panorama 45-65-45-65 for EAS/EOS with Glass ceramic coated (GKB), Chamotte inner lining (FR) with Mounting bracket	HK051002-04
	BKH 5.0 Panorama 45-65-45-65 for EAS/EOS with Glass ceramic coated (GKB), Chamotte inner lining (FR) with wide frame	HK051002-08
	BKH 5.0 Panorama 45-65-45-65 with manual operation, with Ceramic glass (GK), Combustion chamber inner lining cast iron (FR/Guss) with Mounting bracket	HK051002-09
	BKH 5.0 Panorama 45-65-45-65 with manual operation, with Ceramic glass (GK), Combustion chamber inner lining cast iron (FR/Guss) with wide frame	HK051002-13
	BKH 5.0 Panorama 45-65-45-65 with manual operation, with Glass ceramic coated (GKB), Combustion chamber inner lining cast iron (FR/Guss) with Anbaukante	HK051002-11
	BKH 5.0 Panorama 45-65-45-65 with manual operation, with Glass ceramic coated (GKB), Combustion chamber inner lining cast iron (FR/Guss) with wide frame	HK051002-15
	BKH 5.0 Panorama 45-65-45-65 for EAS/EOS with Ceramic glass (GK), Combustion chamber inner lining cast iron (FR/Guss) with Mounting bracket	HK051002-10
	BKH 5.0 Panorama 45-65-45-65 for EAS/EOS with Ceramic glass (GK), Combustion chamber inner lining cast iron (FR/Guss) with wide frame	HK051002-14
	BKH 5.0 Panorama 45-65-45-65 for EAS/EOS with Glass ceramic coated (GKB), Combustion chamber inner lining cast iron (FR/Guss) with Anbaukante	HK051002-12
	BKH 5.0 Panorama 45-65-45-65 for EAS/EOS with Glass ceramic coated (GKB), Combustion chamber inner lining cast iron (FR/Guss) with wide frame	HK051002-16
2	The non-installed parts (e.g. deflection plates, control levers, etc.) and any accessories ordered (e.g. catalytic converter, packaging with EOS, etc.), including the instructions box, are packed in the combustion chamber	
3	Catalyst module BKH 5.0 Panorama	HK000233
Smoke hood variants		
4	Connection variant MAS SET440	SET213446

4.1 BKH PANORAMA: HEAT PROTECTION PANEL = STANDARD

Position

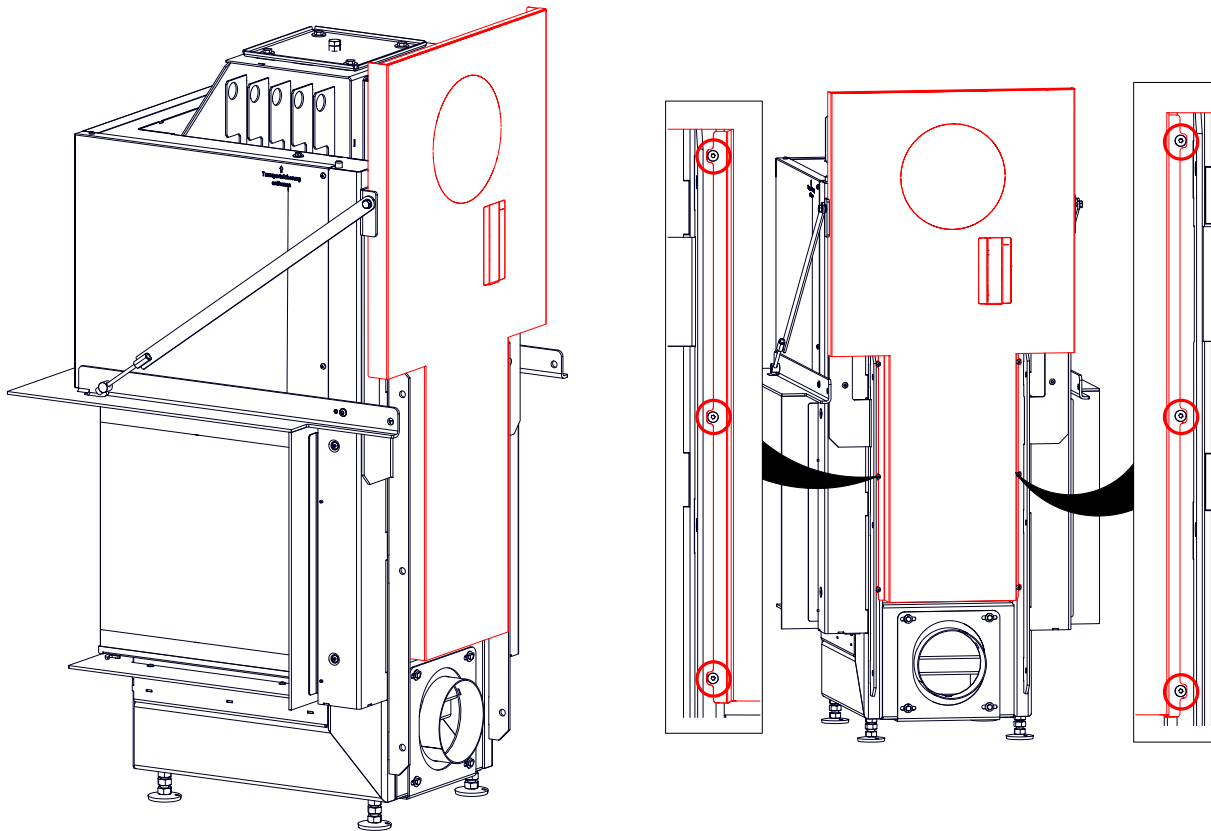

4.2 CATALYTIC CONVERTER (OPTIONAL)




The catalytic converters are coated with a catalytically active layer. This coating can consist of mixed metal oxides or also of precious metals.



**ATTENTION**

The catalysts are fragile and must only be handled with care. Avoid bumping and do not drop the catalytic converter. This could destroy the catalytic converter!

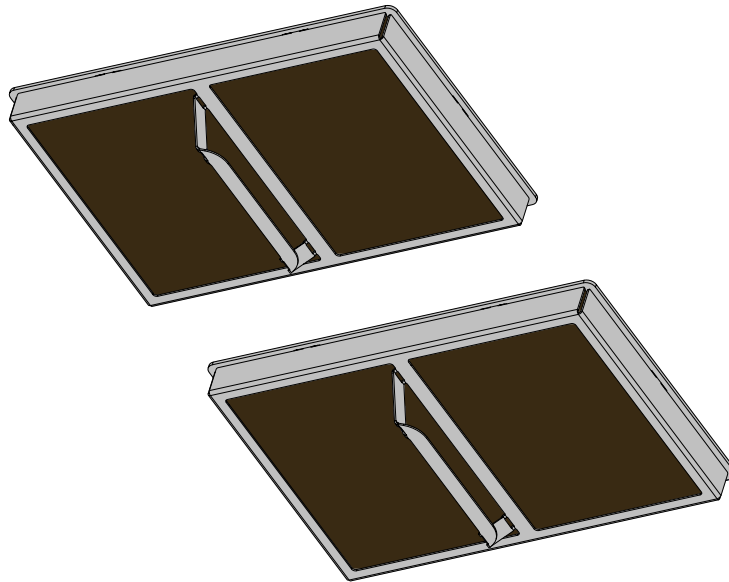**Note**


This catalytic converter is suitable for all BKH Panorama.

This catalytic converter can also be retrofitted.




5 SAFETY DISTANCES BKH PANORAMA



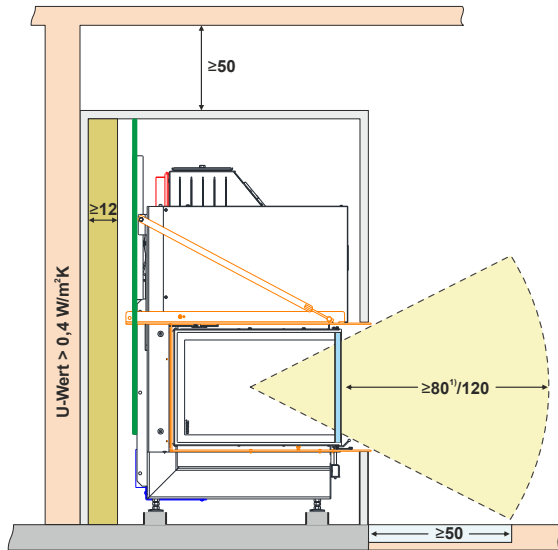

Mounting wall combustible

Half-height version
with heat protection panel

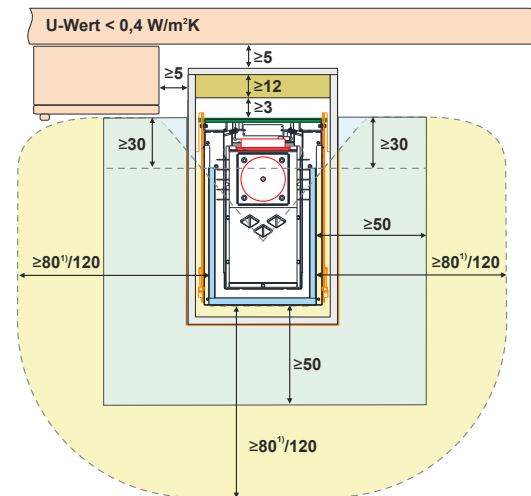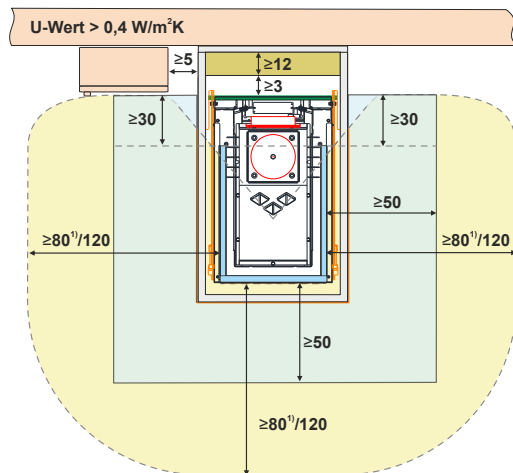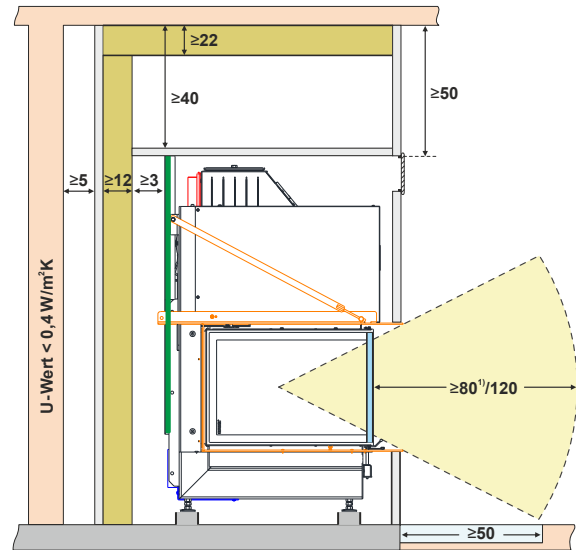

Floor-to-ceiling version
with heat protection panel







	floor/wall/ceiling non-combustible
	wall/ceiling/floor/attachments combustible/to be protected
	substitute insulation material calcium silicate (Promasil 950-KS)
	heat protection panel (accessories)

¹) Glass ceramic coated (GKB)


All figures in cm

When designing the exhaust system and exhaust pipe, national standards and fire protection regulations must be observed

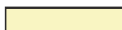
	fireplace cladding
	convection opening
	radiation range
	non-combustible flooring /floor protection pane


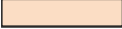


Mounting wall non-combustible

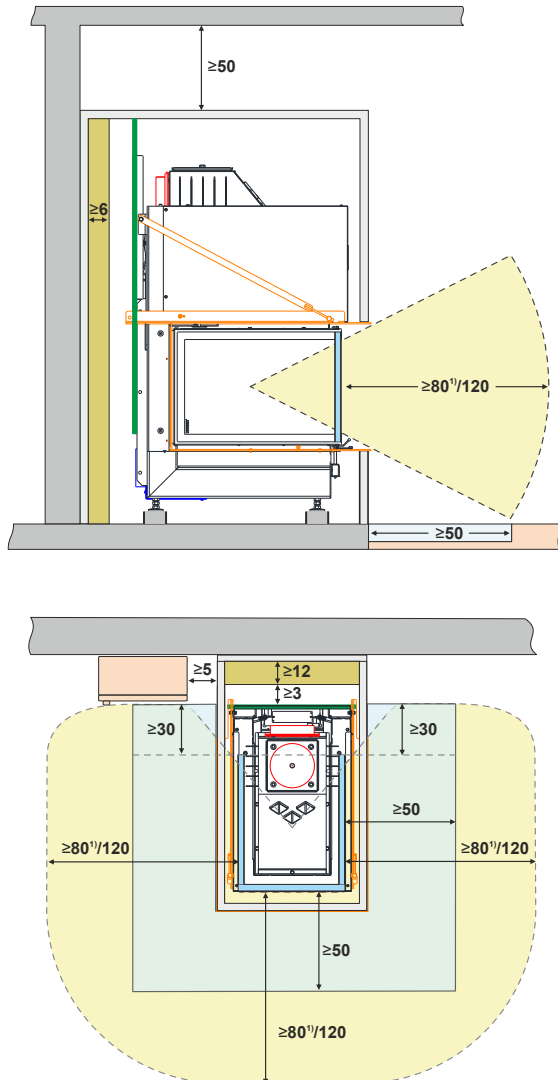Half-height version with heat protection panel

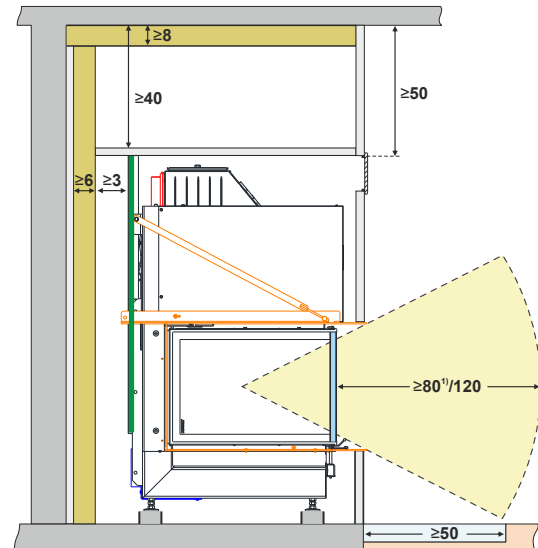

Floor-to-ceiling version with heat protection panel



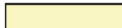



-  floor/wall/ceiling **non-combustible**
-  wall/ceiling/floor/attachments **combustible/to be protected**
-  substitute insulation material calcium silicate (Promasil 950-KS)
-  heat protection panel (accessories)

¹⁾ Glass ceramic coated (GKB)

All figures in cm

When designing the exhaust system and exhaust pipe, national standards and fire protection regulations must be observed

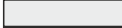-  fireplace cladding
-  convection opening
-  radiation range
-  non-combustible flooring /floor protection pane

6 INSTALLATION

6.1 SETTING UP

**DANGER**

Possible personal injury and/or property damage caused by improper installation

Assembly and installation of BKH requires extensive specialist knowledge.

- Assembly and installation works must be performed by authorized professionals.

**Danger**

Risk of injury caused by heavy loads


Carrying of heavy loads can lead to injuries.

- The equipment should be carried by at least two people.
- Use appropriate carrying aids.
- Keep the transport weight in mind.


As long as the device is on the wooden pallet, it can be transported with a hand truck or forklift as usual.

6.1.1 REMOVE THE TRANSPORT LOCKS

6.1.1.1 BKH PANORAMA ST (LIFTING DOOR)


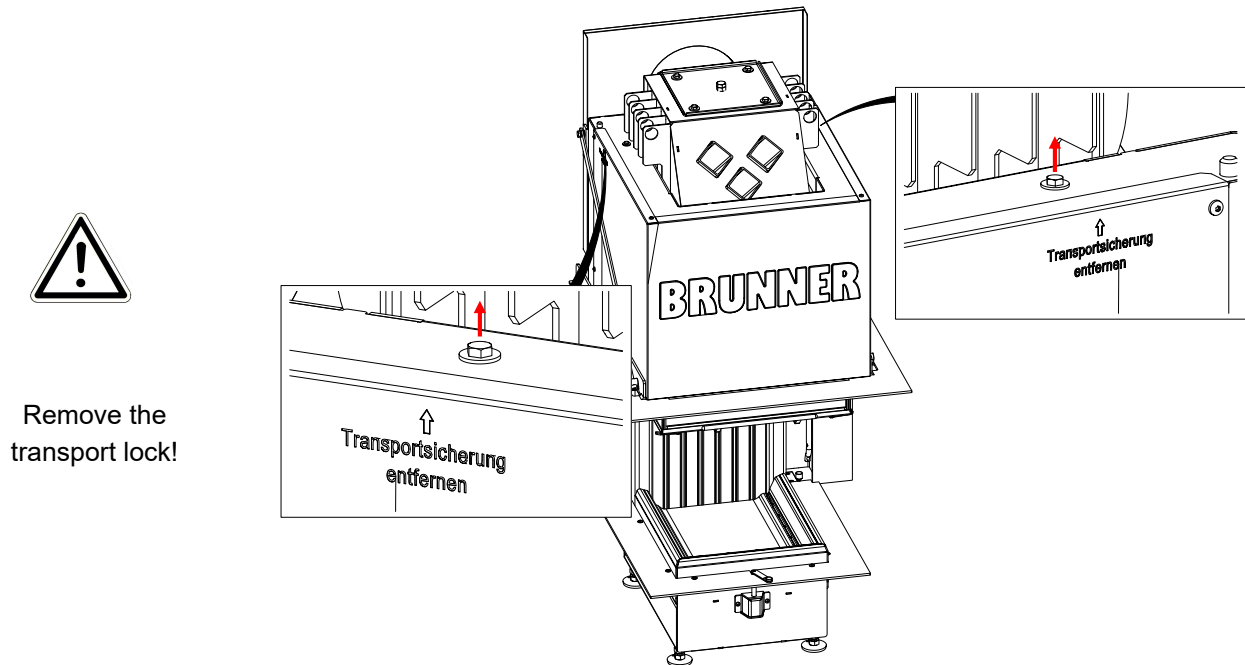


6.2 FITTING: CATALYTIC CONVERTER


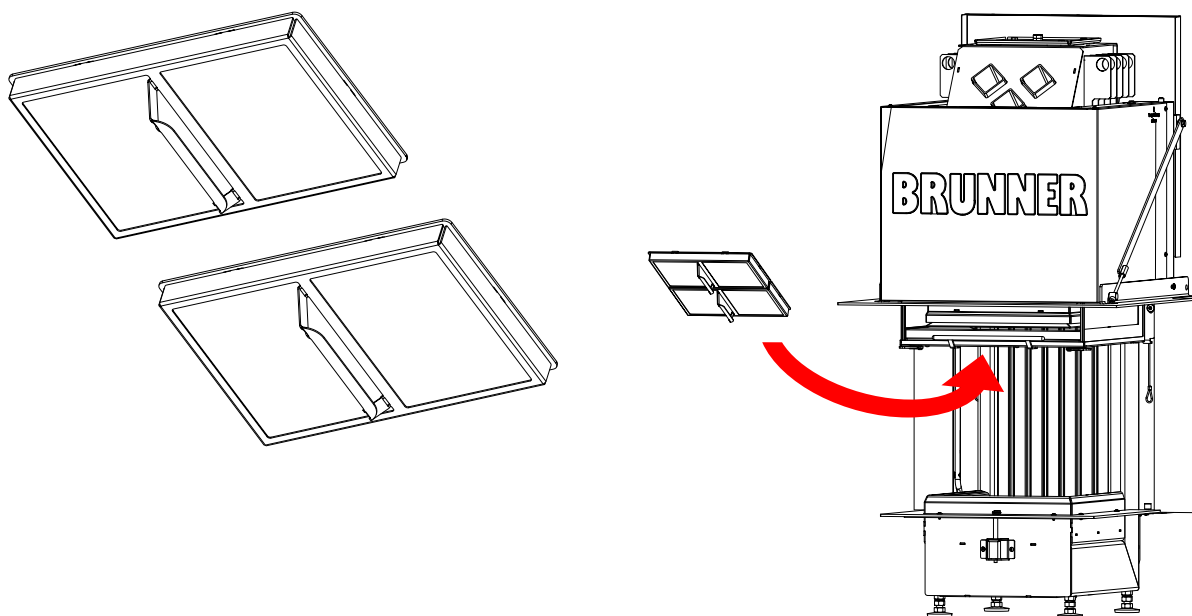


Summarised information


Workflow:

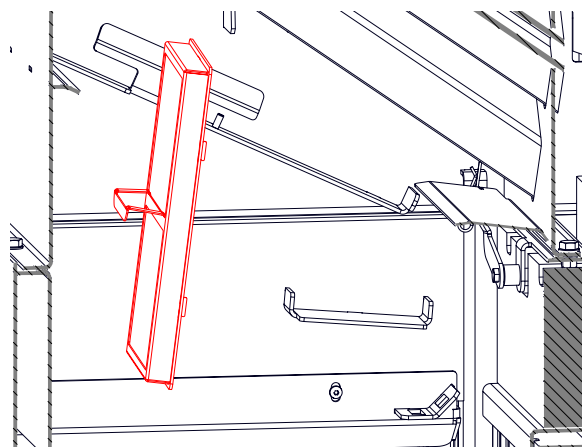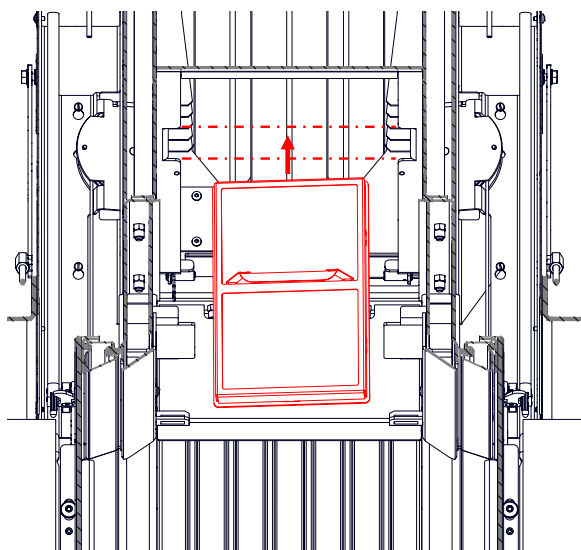


1

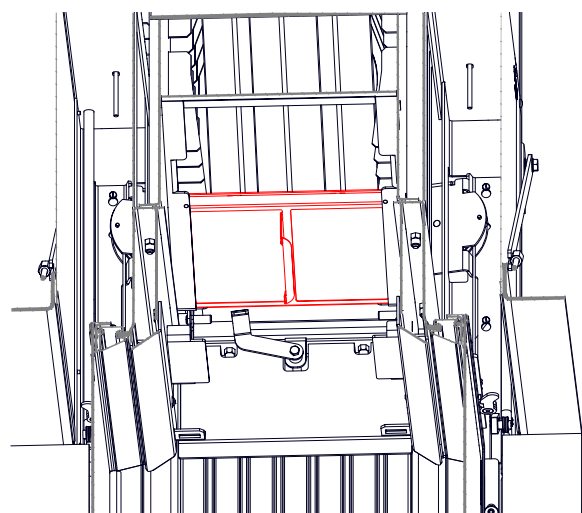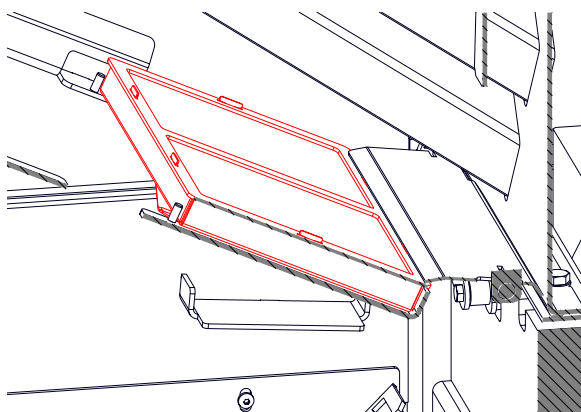

2

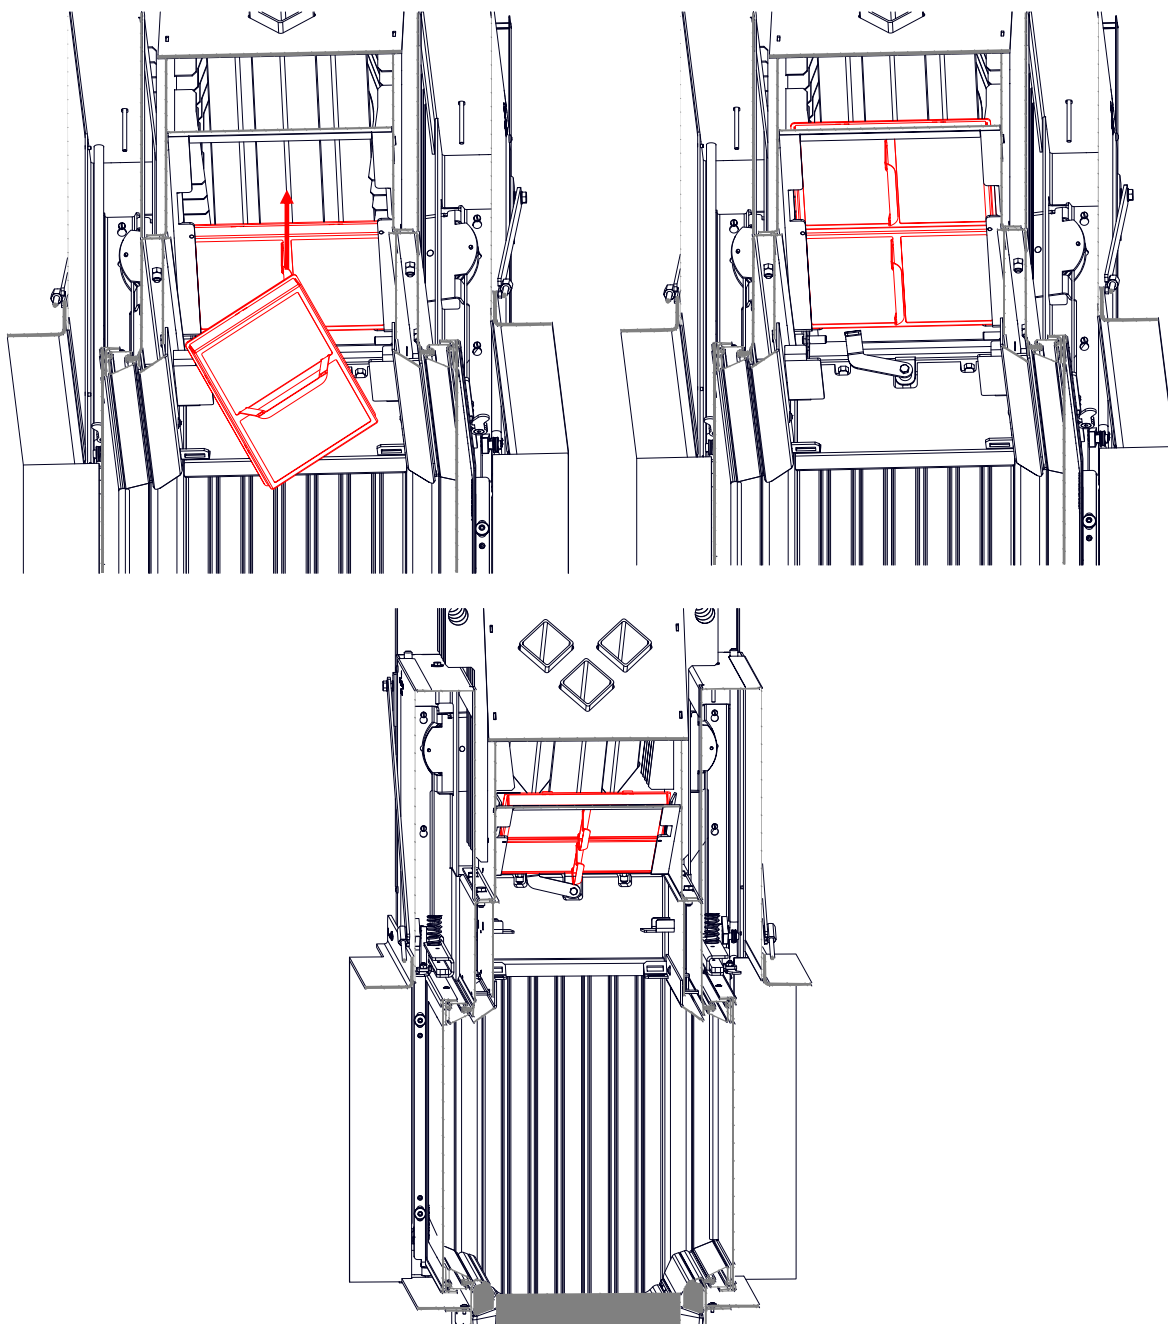


6.3 FITTING: DEFLECTION

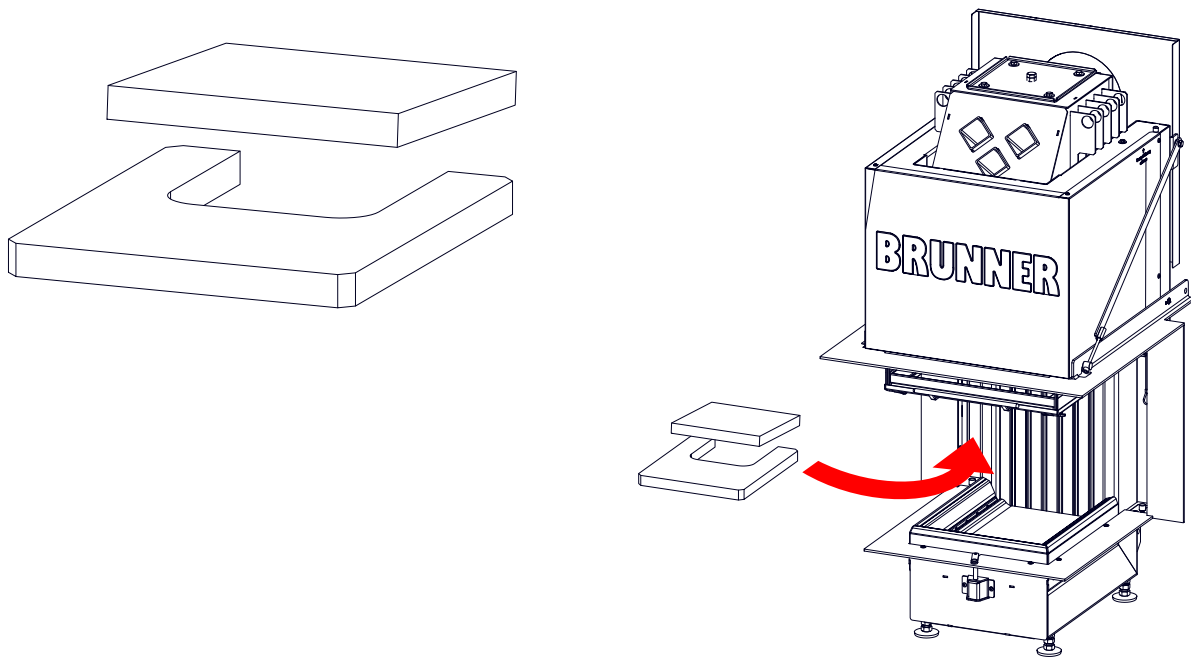

Summarised information


2

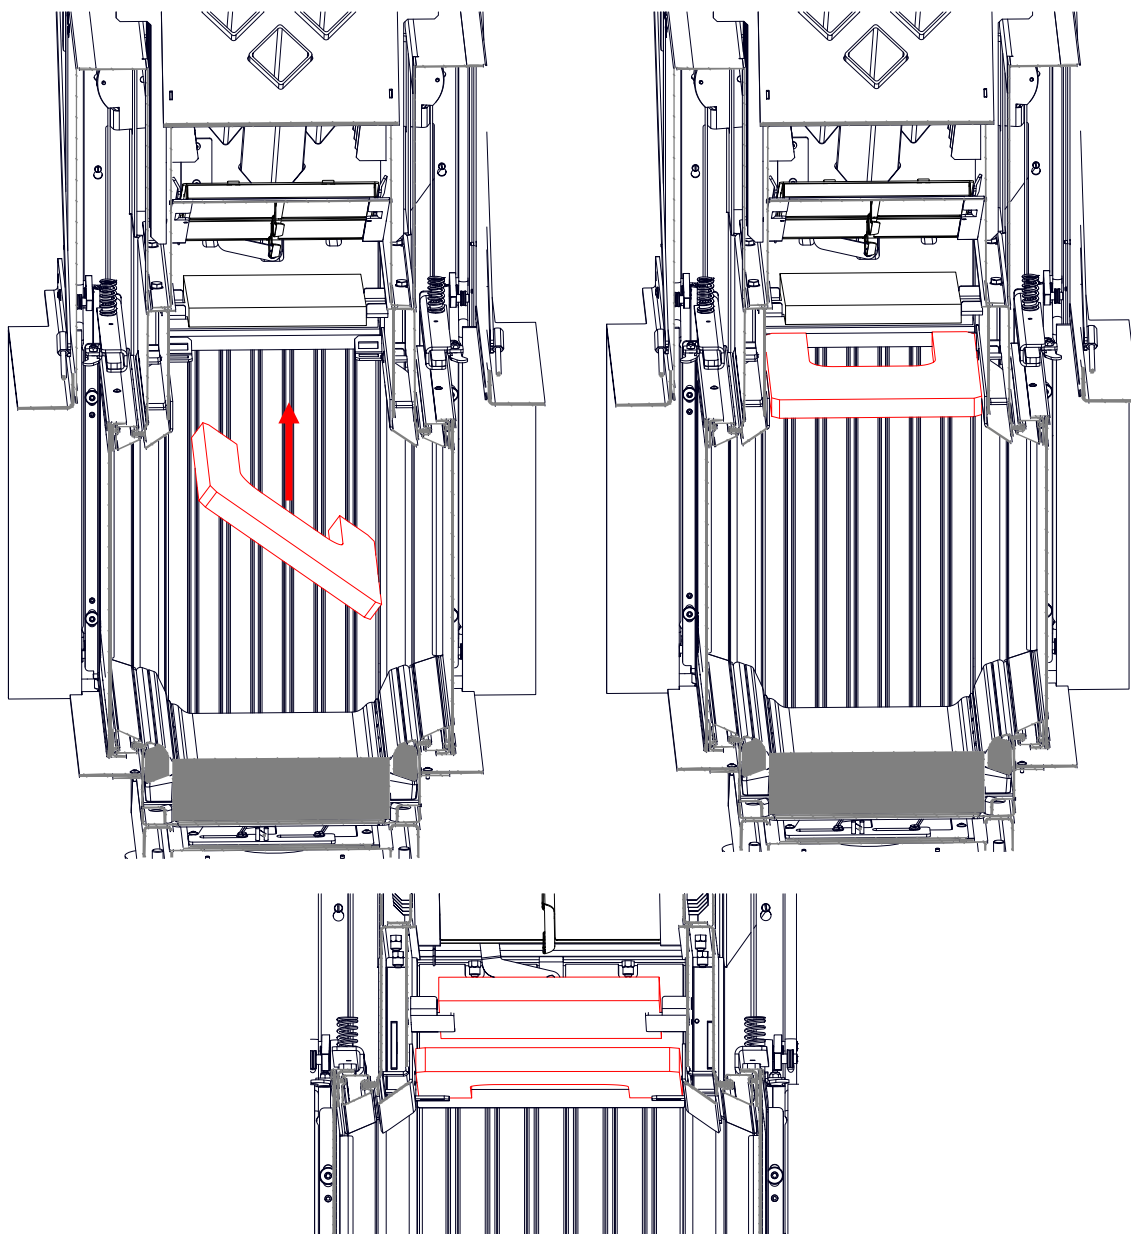

6.4 VARIANTS COMBUSTION CHAMBER LINING

6.4.1 CHAMOTTE INNER LINING

Panorama 45-65-45-65 (HK051200-01)

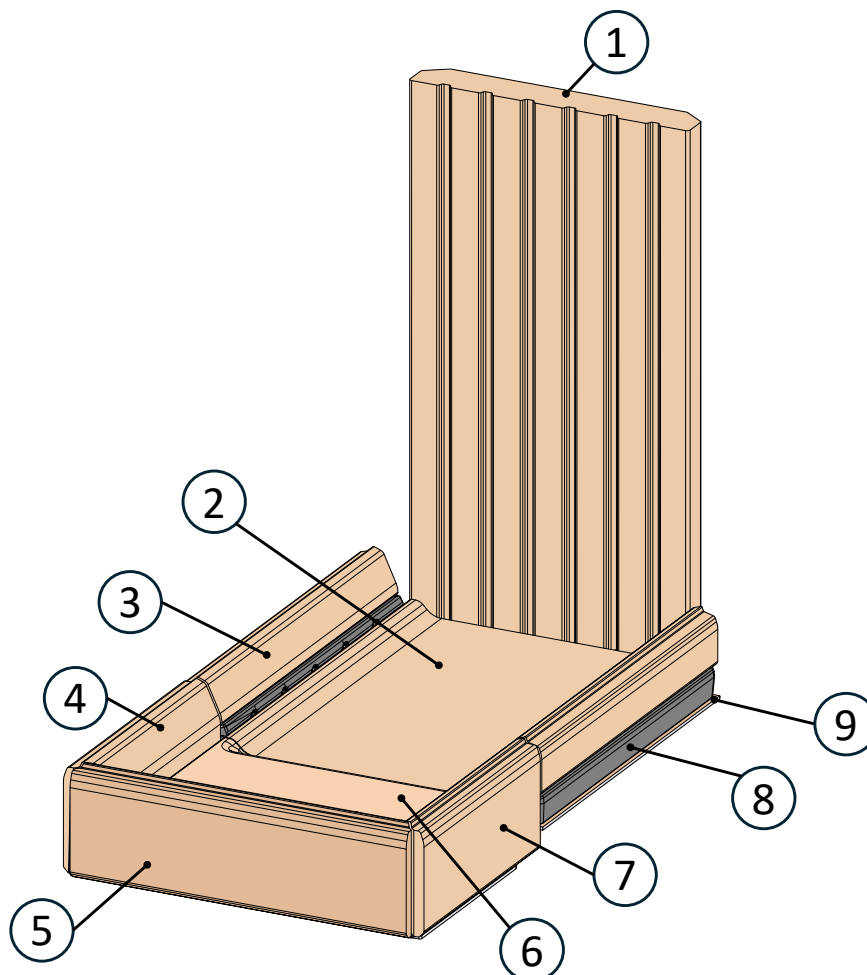

Position	Designation	Art. No.	Pcs.
1	Stone 542x275x40	HK000263	1
2	Bottom stone 368x270x40	HK000261-01	1
3	Wedge stone 350x40x40	HK000277-01	2
4	Wedge stone 230x105x40	HK000279-01	1
5	Wedge stone 330x105x40	HK000267-01	1
6	Bottom stone extension 270x200	HK000272-01	1
7	Wedge stone 230x105x40	HK000278-01	1
8	Cast air distributor Pano 1	HK000098	2
9	Bottom insulation 1 Pano	HK050211	1




Chamotte inner lining to be installed dry

6.5 VARIANTS HEAT EXCHANGER

6.5.1 MAS


6.5.1.1 COMPONENTS MAS MODULAR TOP-MOUNT STORAGE SET 440

MAS modular top-mount storage SET 440 (SET213446)

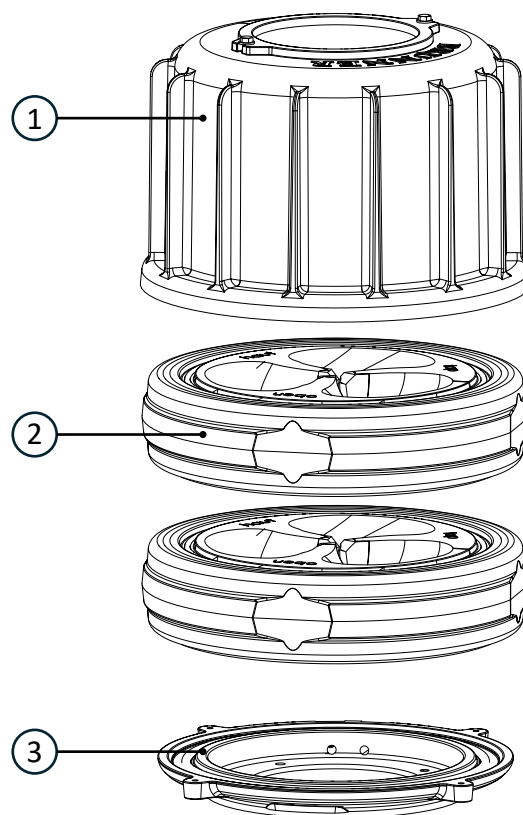





Position	Designation	Art.-Nr.	Pcs.
1	Cast iron dome ø 180 mm	R009095-01	1
2	MAS 440 accumulation stone double-layered	R009042	2
3	Mounting ring	10085.1	1

6.5.1.2 FITTING: MAS MODULAR TOP-MOUNT STORAGE SET 440




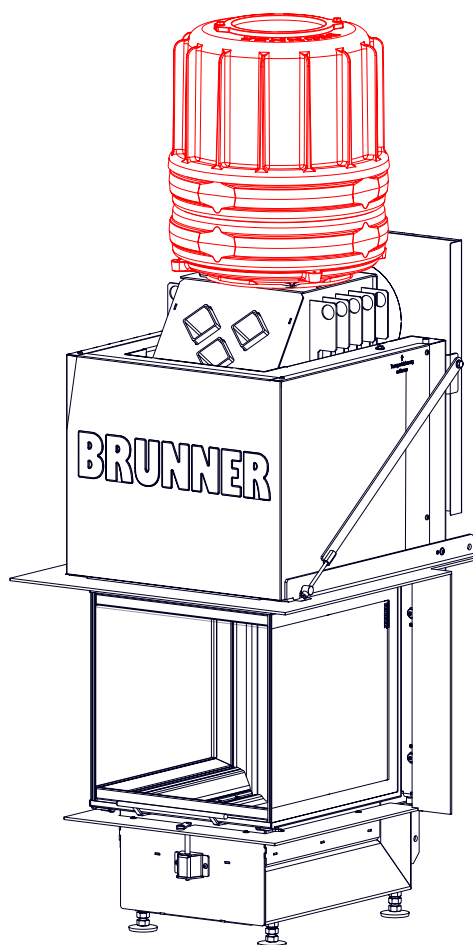


Workflow

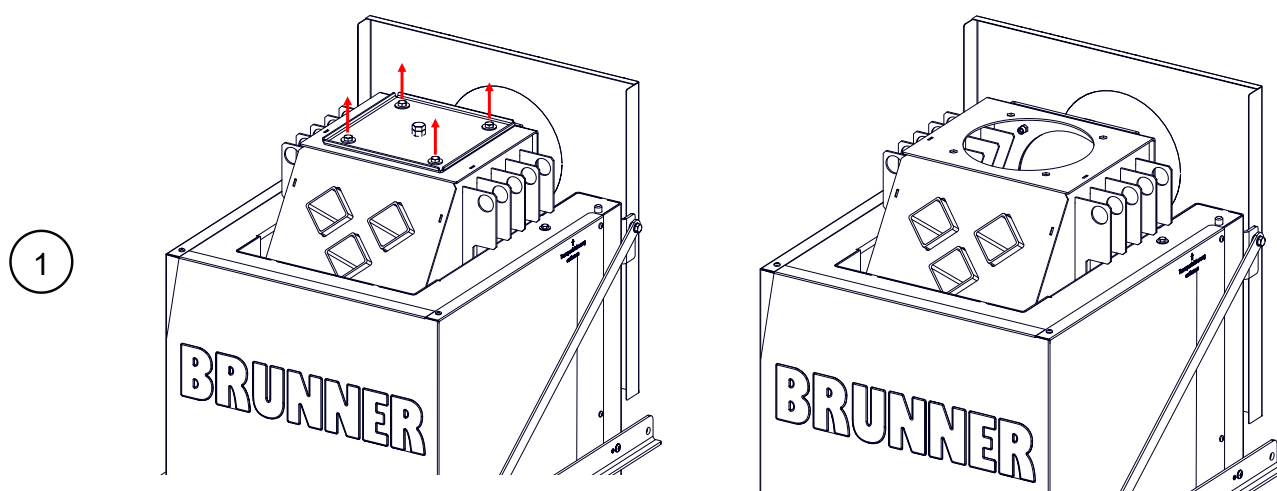

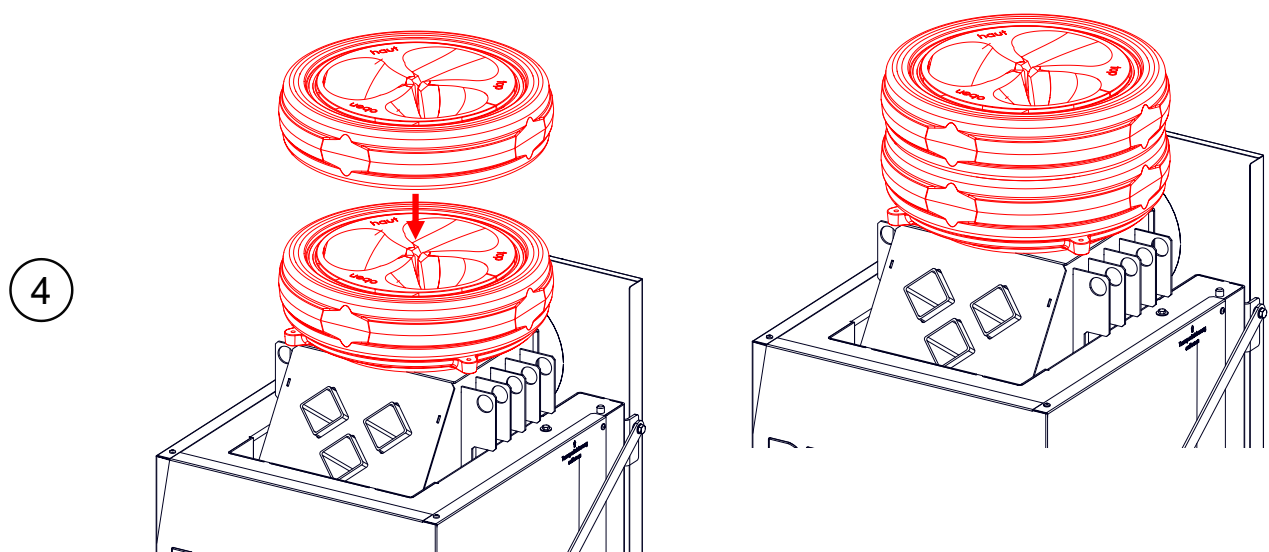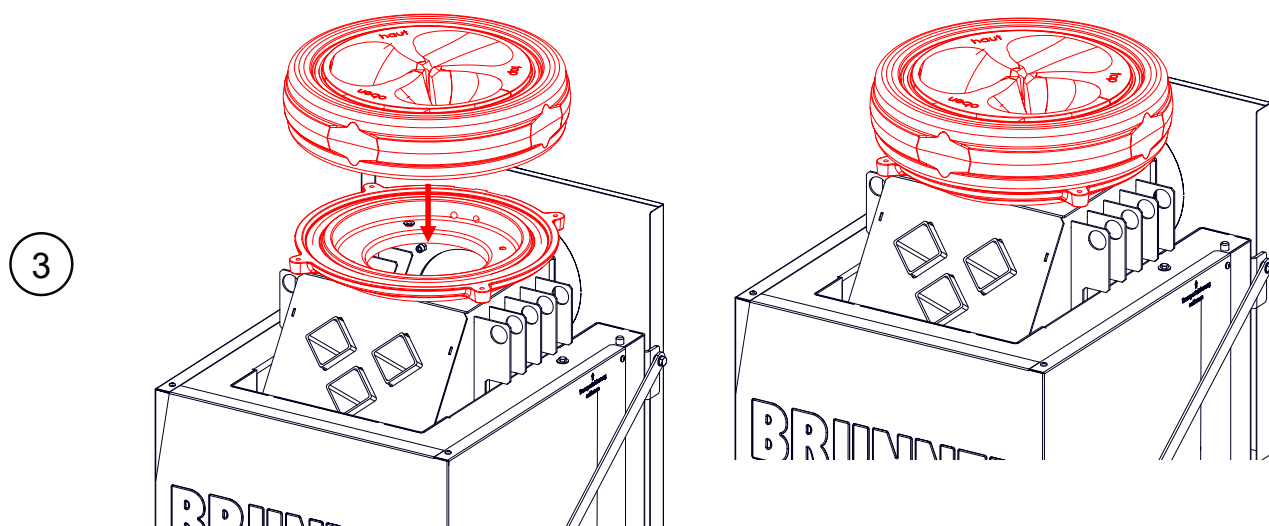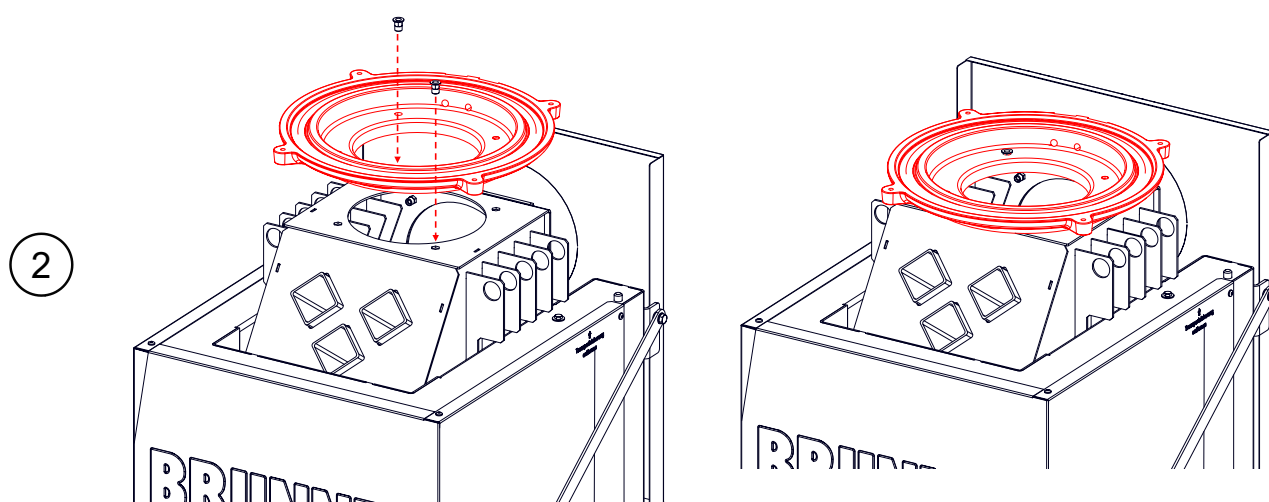

5

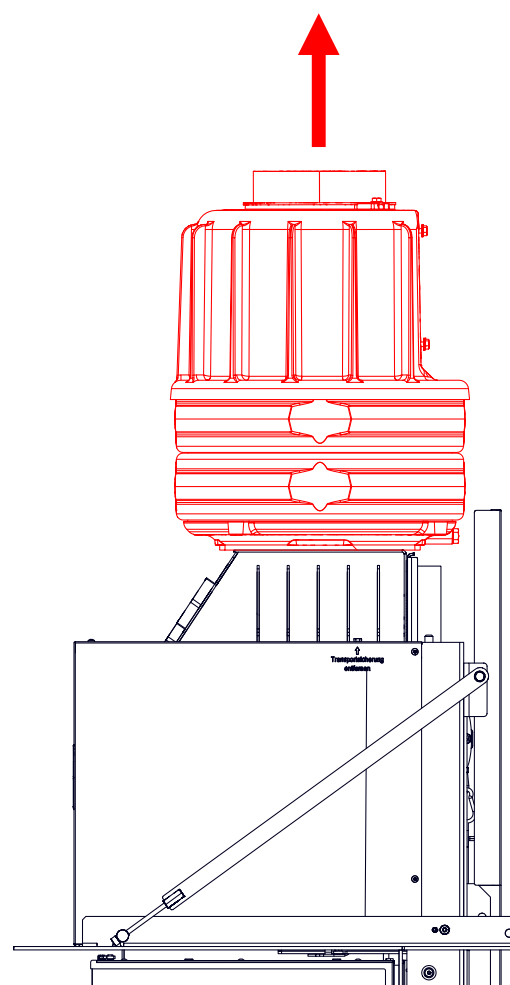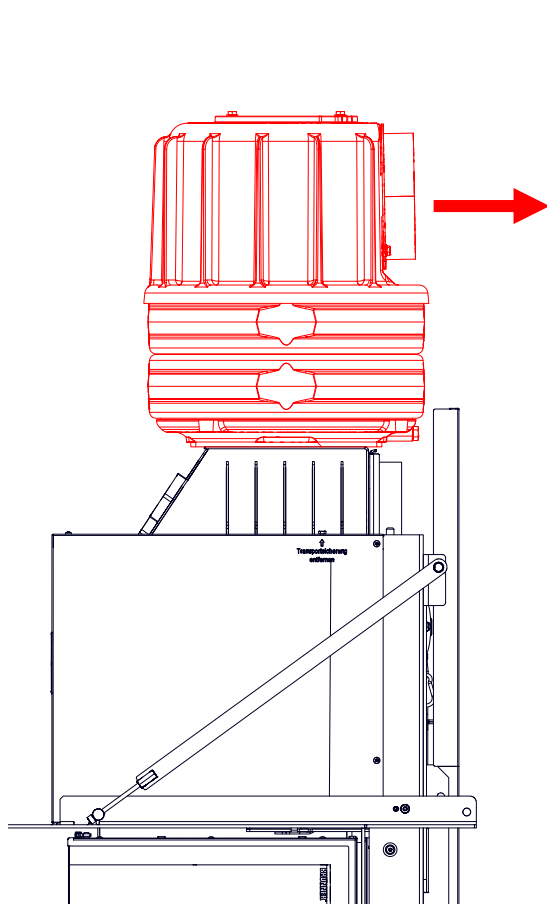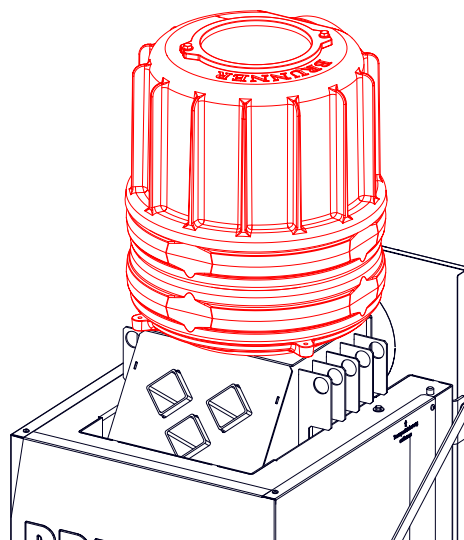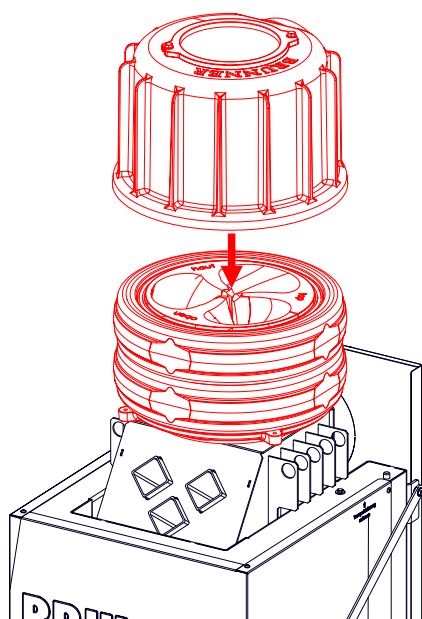


NOTICE

Ensure correct position after fitting the cast iron dome!

During installation, the cast dome can shift so that it no longer sits correctly aligned on the mounting ring.



- Check with light test: Illuminate the combustion chamber to make any gaps between the mounting ring and the cast iron dome visible.

6.6 VARIANT: MOUNTING BRACKET - WIDE FRAME

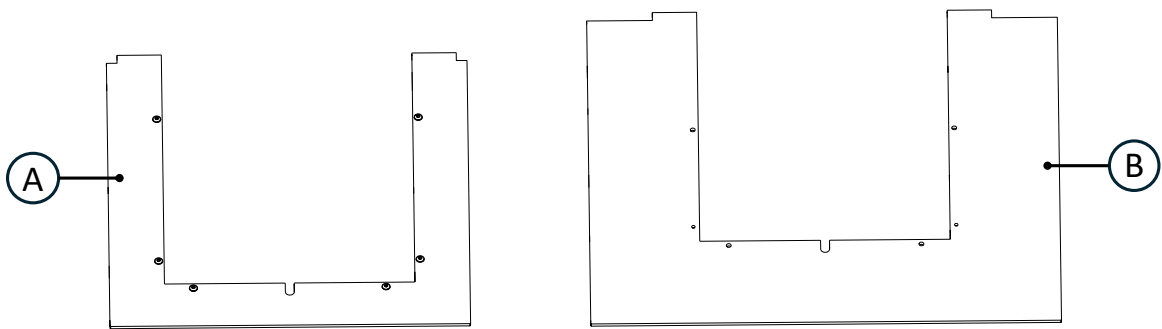

A: Mounting bracket

B: wide frame

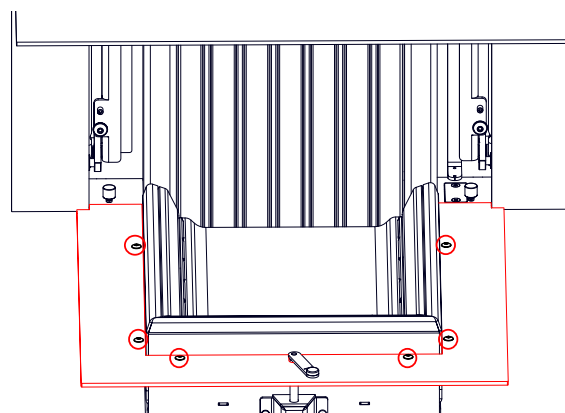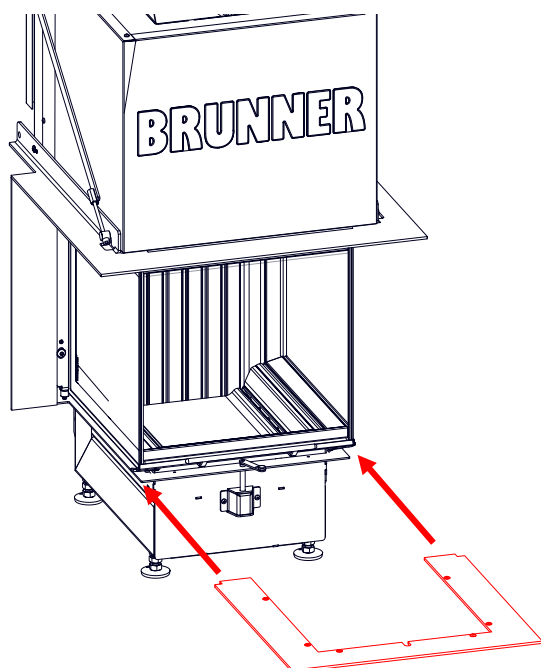



Summarised information

6.7 VARIANT: EOS

6.7.1 BOTTOM COVER AIR BOX EOS

6.7.1.1 COMPONENTS EOS


BG Bottom cover Air box small EOS (HK000064)

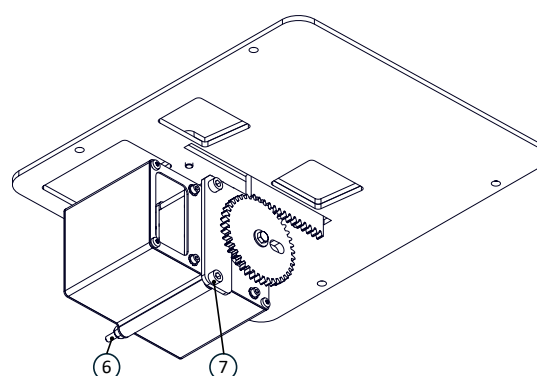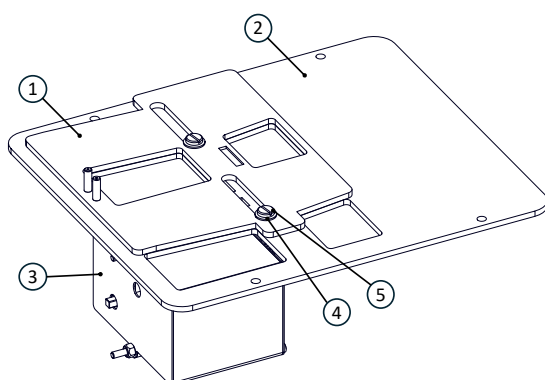


Position	Designation	Art.-Nr.	pcs
1	Air slide plate small EOS	HK000232	1
2	BG Bottom cover Air box small EOS	HK000219	1
3	BG Servomotor EOS with Gear wheel	N003157	1



Position	Designation	Art.-Nr.	pcs
4	Collar bushing	I007337	2
5	Flat head screw (M5x6)	800461	2
6	hexagon nut with Clamping part	800155	2
7	Cylinder head screw (M5x100)	800035	2

6.7.1.2 FITTING: EOS

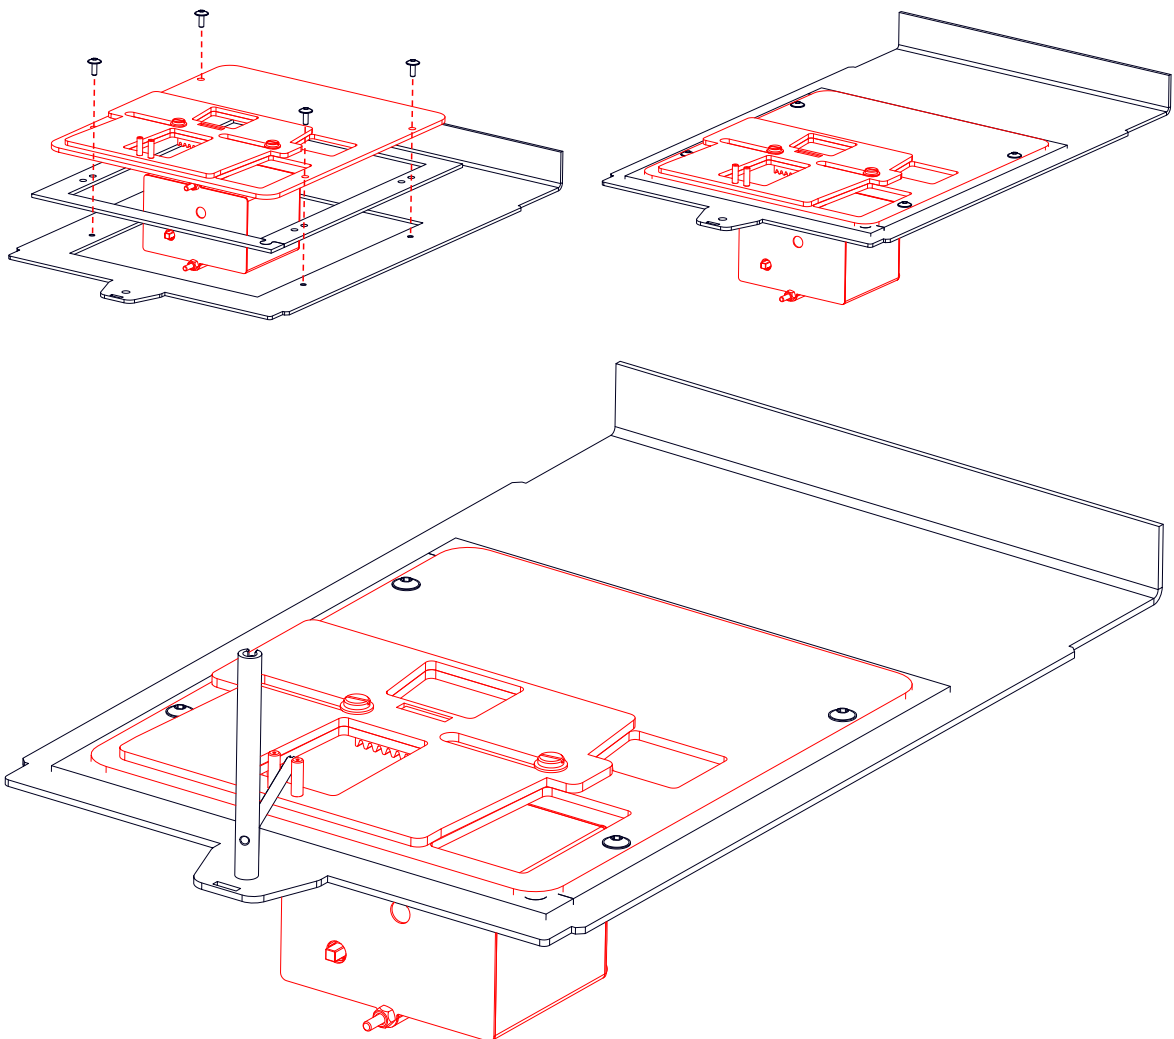

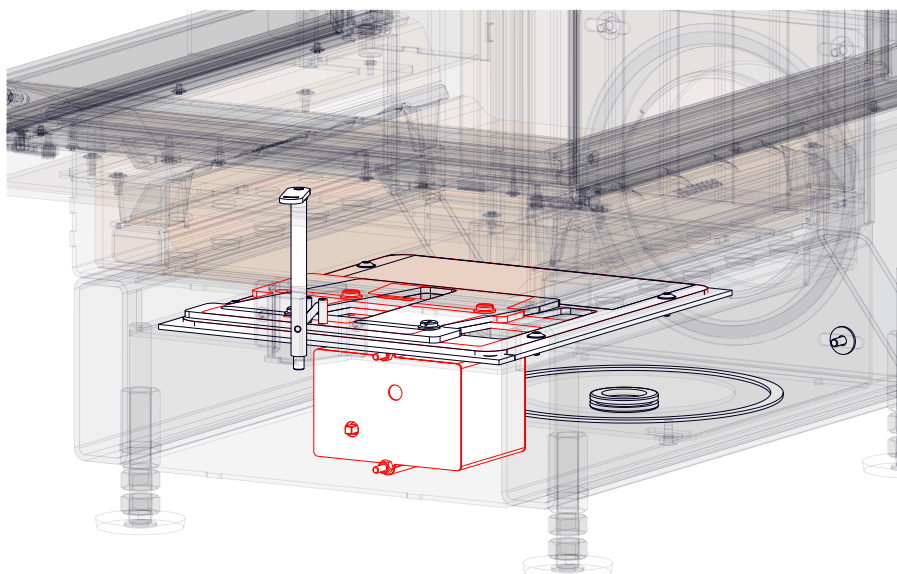

6.7.1.3 AIR POSITION INDICATOR PANORAMA

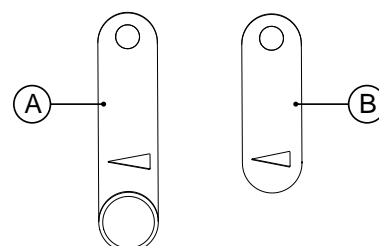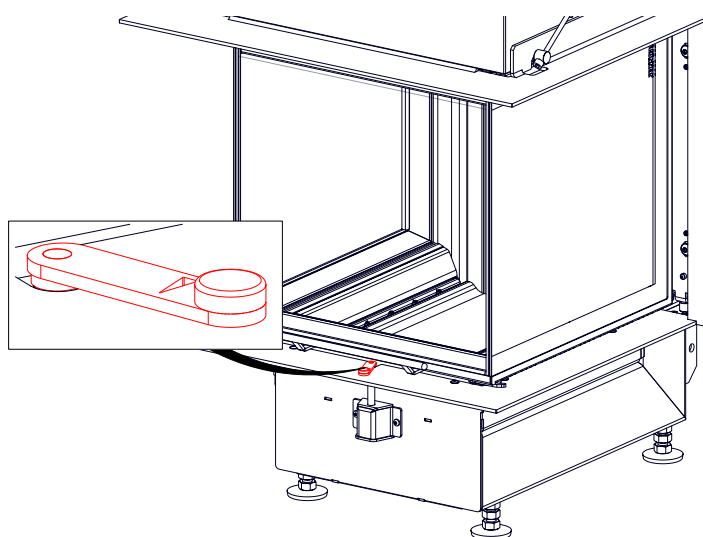


A = BKH Panorama

B = BKH Panorama with EOS

6.7.2 THERMOCOUPLE

6.7.2.1 COMPONENTS THERMOCOUPLE


BG Thermocouple with Retaining plate (HK000095)

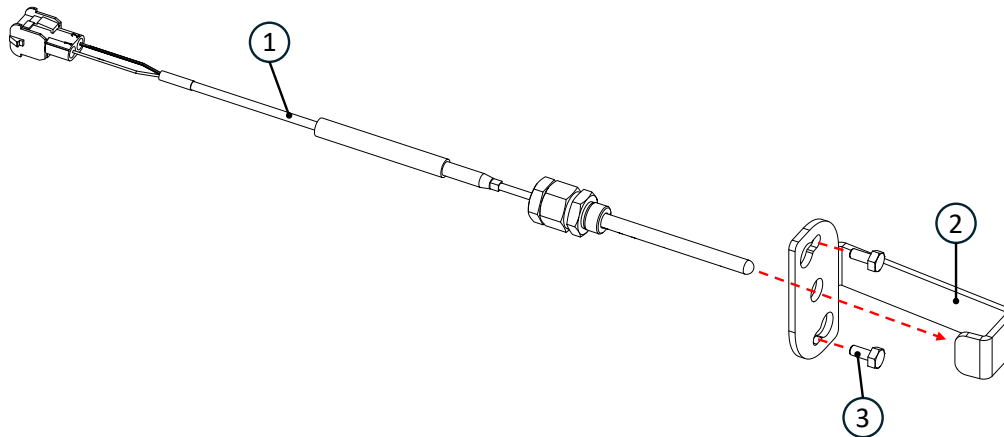

Position	Designation	Art.-Nr.	Pcs.
1	BG Thermocouple	10992.1	1
2	Thermocouple Retaining plate	HK000216	1
3	Hexagon head screw (M5x10)	02531	2


6.7.2.2 FITTING: THERMOCOUPLE

Position

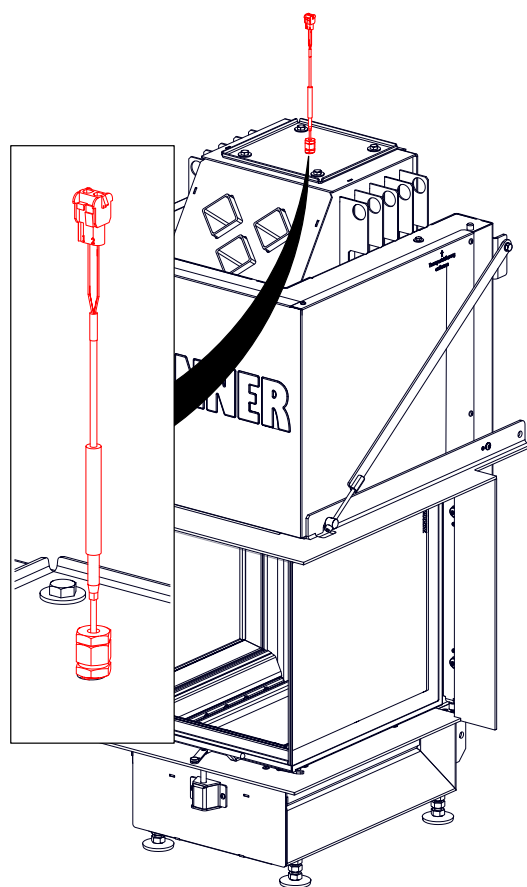


Workflow

1

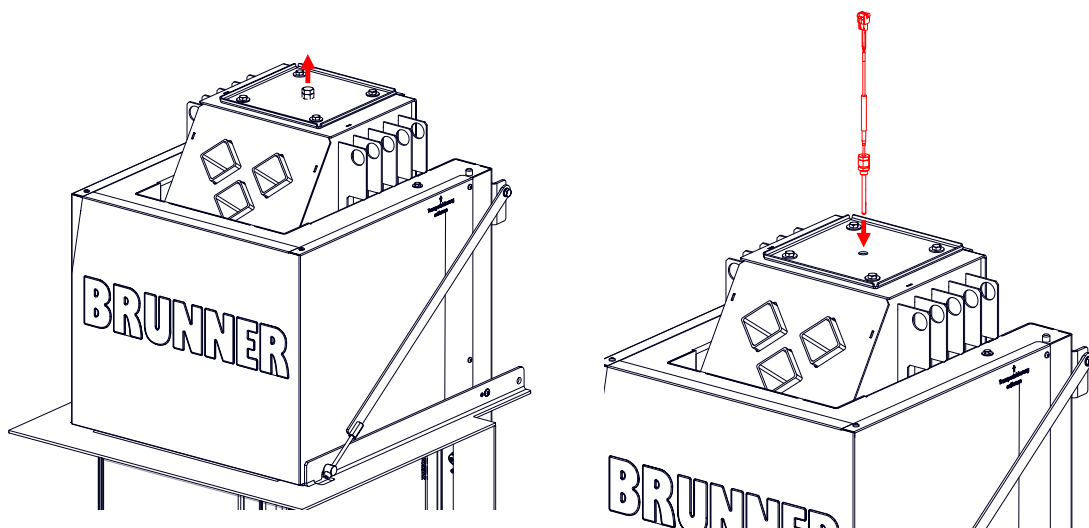



6.7.2.3 MEMBRANE FEED-THROUGH

Membrane feed-through (901248)

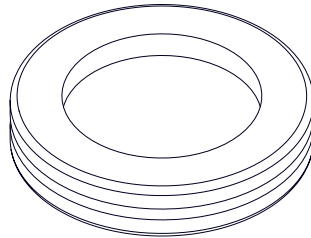

Position

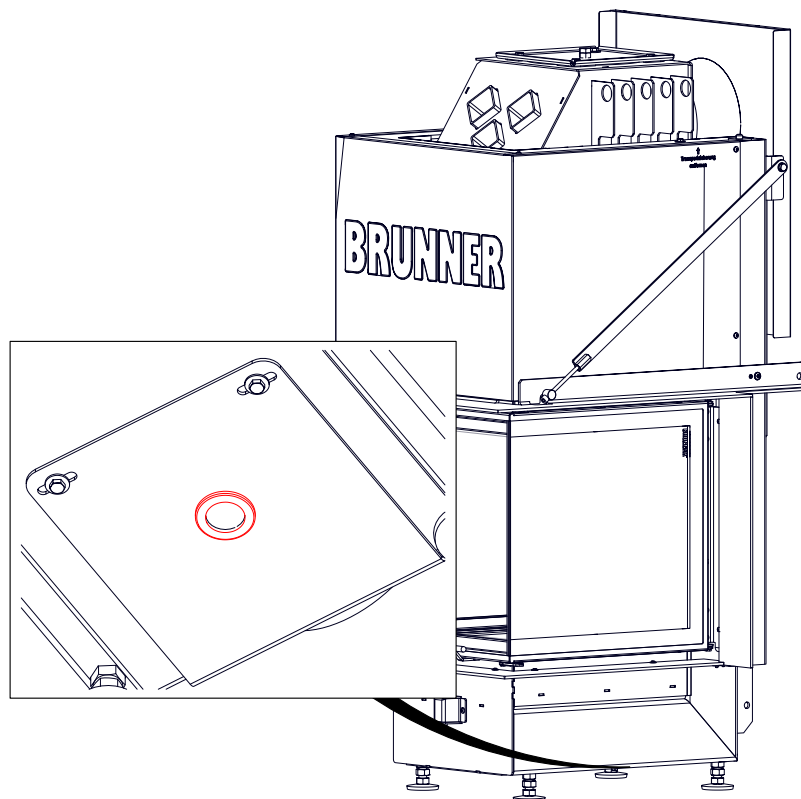

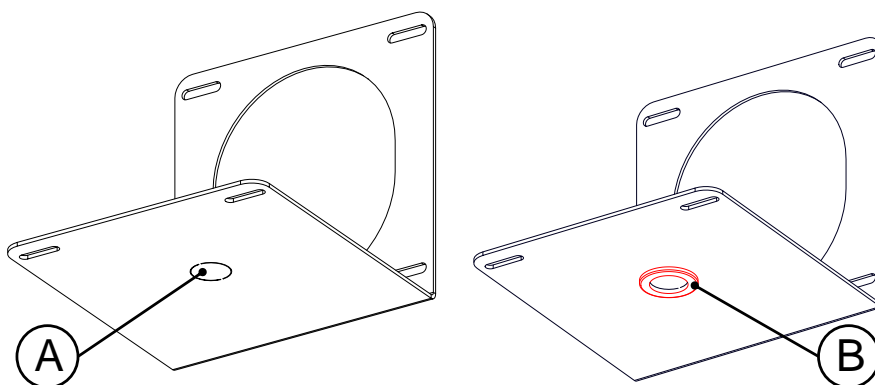


A = BKH Panorama

B = BKH Panorama with EOS

6.7.3 DOOR CONTACT SWITCH

6.7.3.1 COMPONENTS DOOR CONTACT SWITCH

BG Door contact switch ges. (E011001)

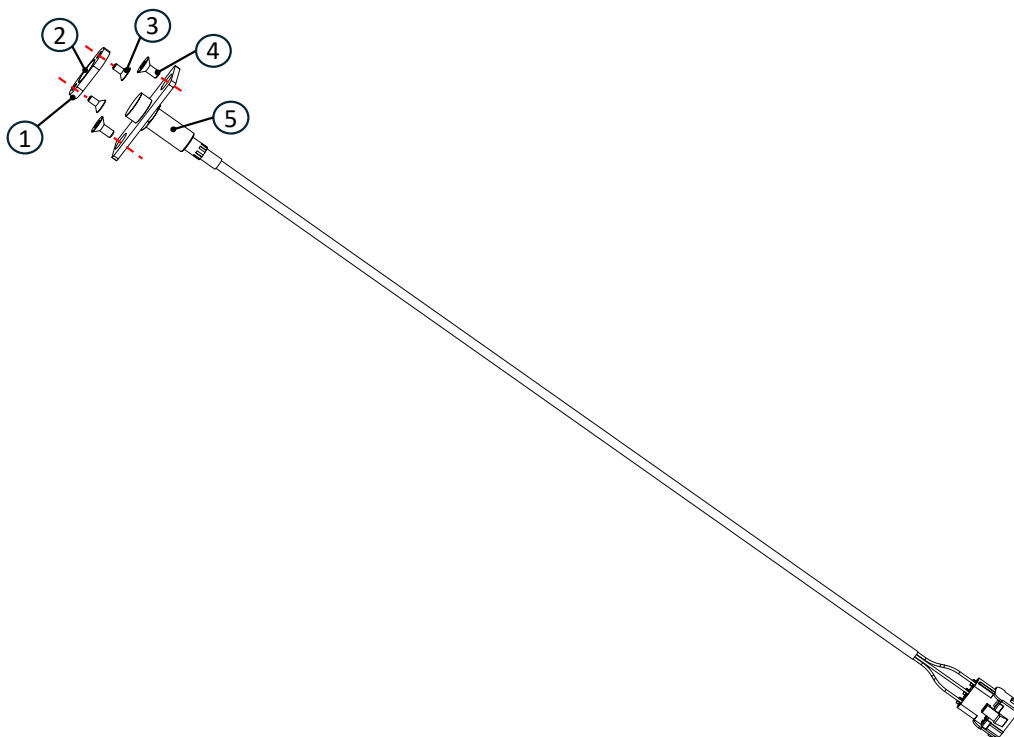


Position	Designation	Art.-Nr.	Pcs.
1	Retaining plate Magnet	E011011	1


Position	Designation	Art.-Nr.	Pcs.
2	Magnet	903324	1
3	Countersunk screw (M4x8)	800063	2
4	Countersunk screw (M5x10)	800184	2
5	BG Door contact switch	E011003	1


6.7.3.2 FITTING: DOOR CONTACT SWITCH

Position

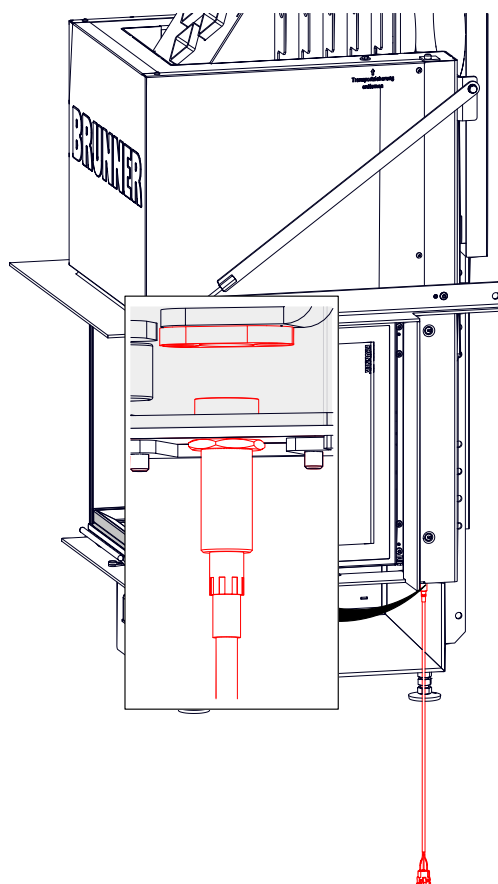

Workflow

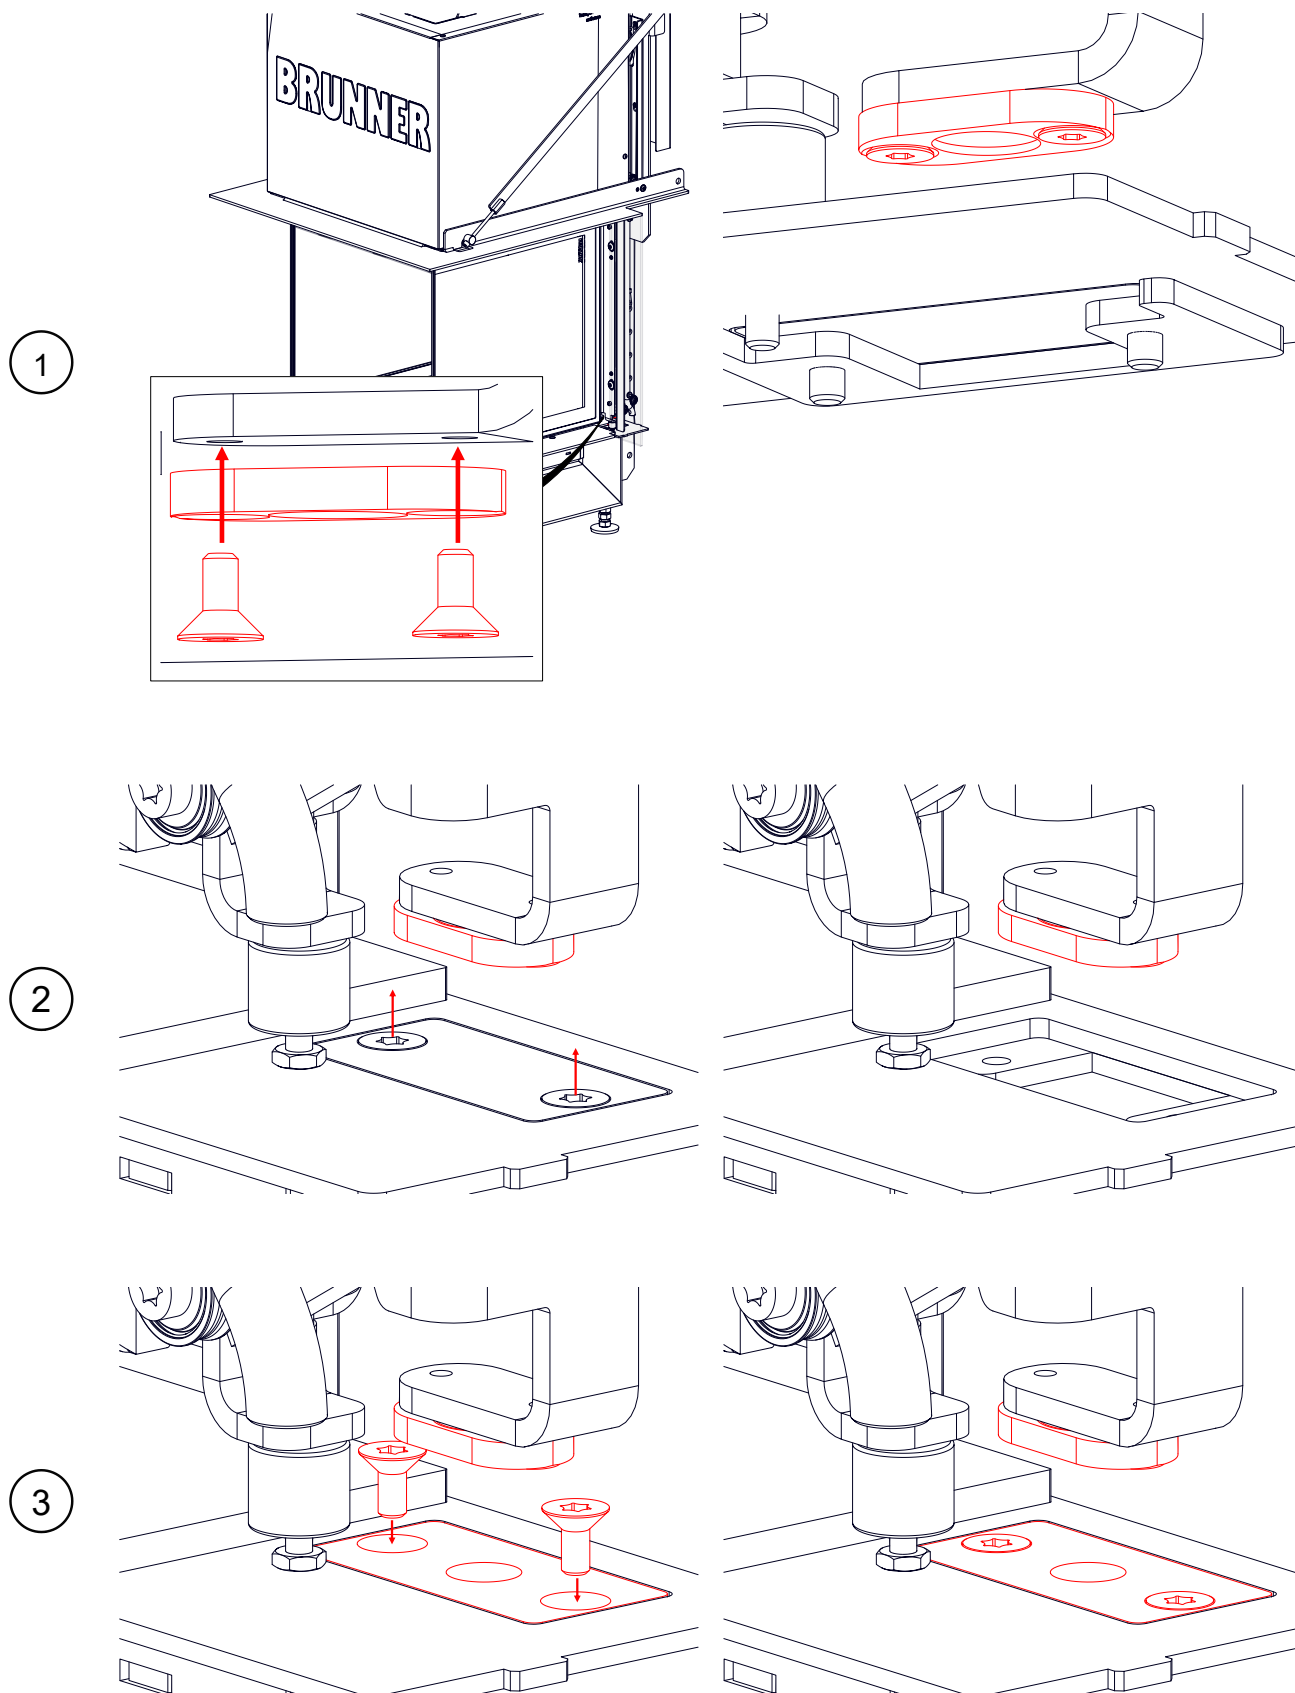

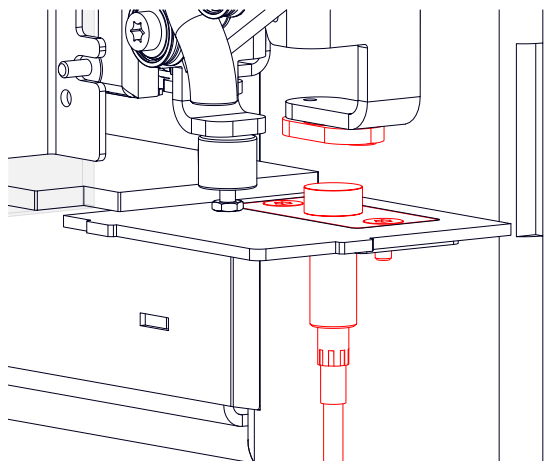

7 DISPOSAL

Old equipment contains valuable materials that must be recycled. Observe the applicable national legal regulations for disposal.



Danger of electrocution.

Electrical connections of the furnace system are under mains voltage. This can lead to electric shock.

Switch off the power supply

Secure power supply against restart.

Old metal parts can be disposed of as metal recycling.

Electrical and electronic components must be disposed of as electronic waste. Fireclay linings can be disposed of as rubble.

Fireclay linings can be disposed of as rubble.

Dispose of insulating and insulating materials of the heating or fireplace insert in a closed container on a suitable waste disposal site.

Do not put the glass ceramic discs in the waste glass collection container! The glass panes can be disposed of as normal household waste.

Recycling of catalytic converters containing precious metals

Oxidative catalytic converters, as installed in modern wood stoves, are very effective at reducing emissions of carbon monoxide and hydrocarbons. This is possible, because precious metals like platinum, palladium and rhodium are used on the surface of catalytic converters. These precious metals are distributed very evenly in very small amounts on the surface of catalytic converters. Over the years, the abrasive effect of particles streaming through the catalytic converter will cause the partial diminishing of the coating containing precious metals. Continuous overheating of catalytic converters ($T > 700\text{ °C}$) will damage the coating. In certain cases, the catalytic converter should be replaced and a new converter must be installed to ensure the catalytic effect.


Used catalytic converters are suitable for re-use. Even if they are broken or damaged, they are suitable for recycling.

Contained precious metals can be recovered by thermal or chemical separation techniques to almost 90%, and then used again in the manufacturing process.


Please bring the used catalytic converter to a recycling center.

Thank you very much for your efforts in supporting the protection of environment and sustainable use of resources.

Dimension sheets - BKH Panorama 45-65-45-65 green

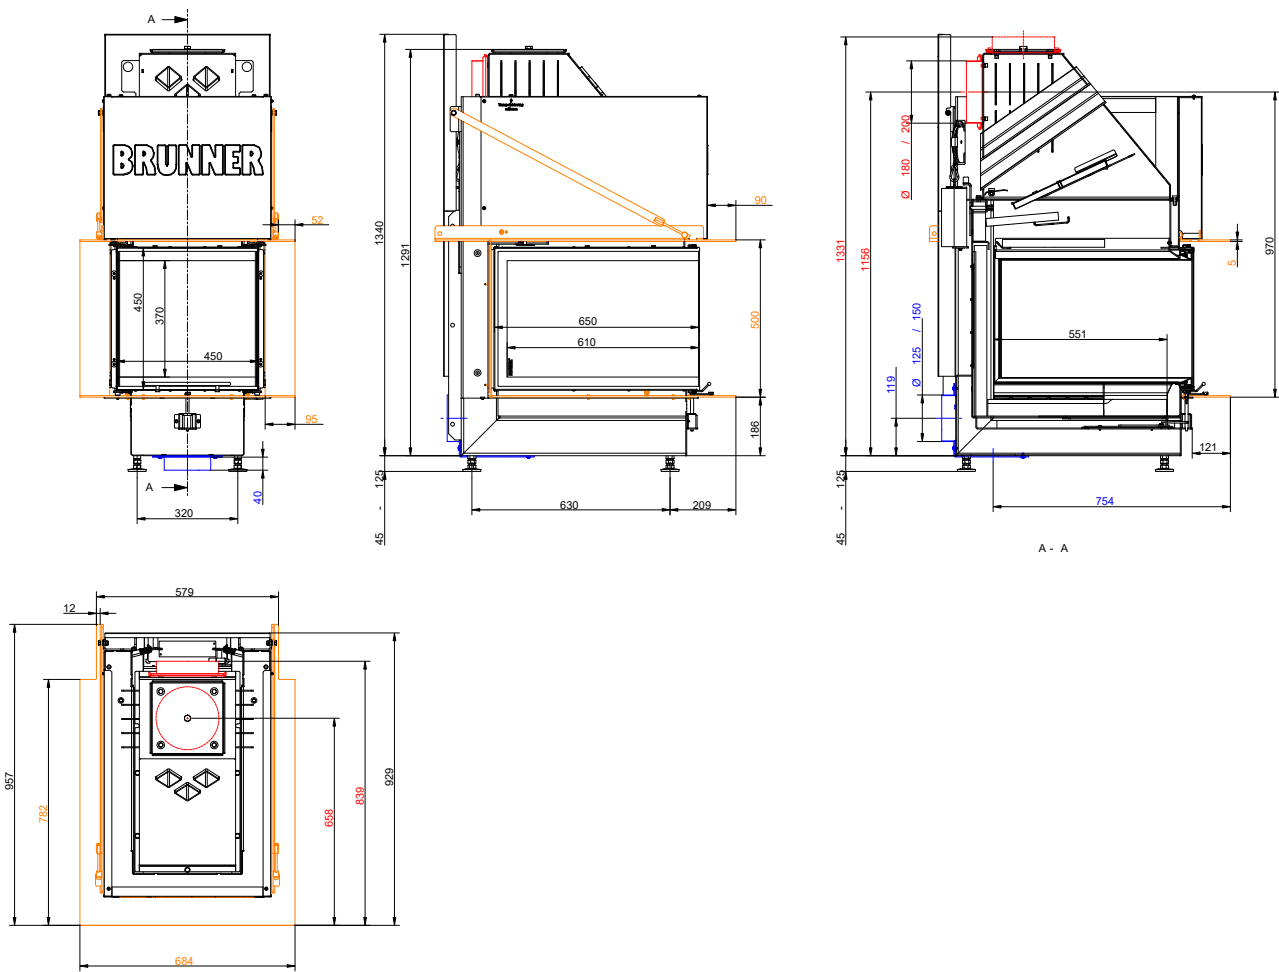


... with steel smoke hood and wide frame

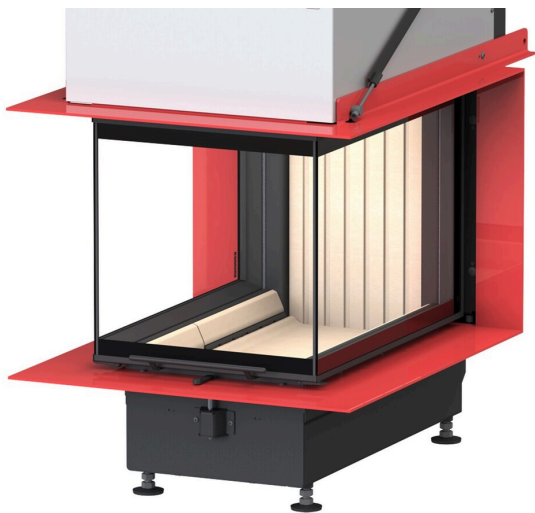

... Detail wide frame (schematic)

Dimension sheets - BKH Panorama 45-65-45-65 green

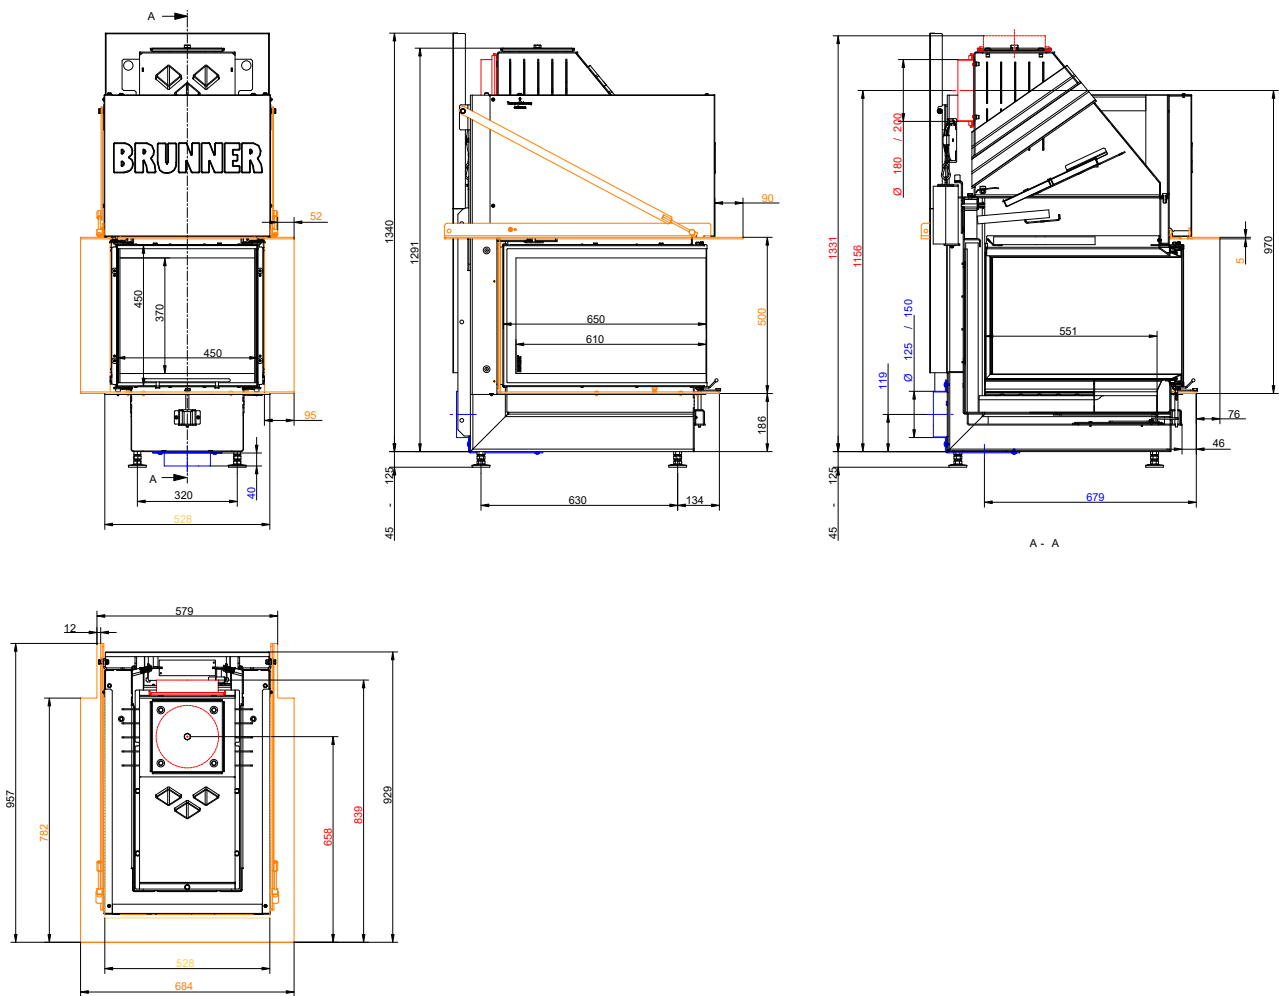


... with steel smoke hood and Mounting bracket



... Detail of narrow frame (schematic)

Dimension sheets - BKH Panorama 45-65-45-65 green

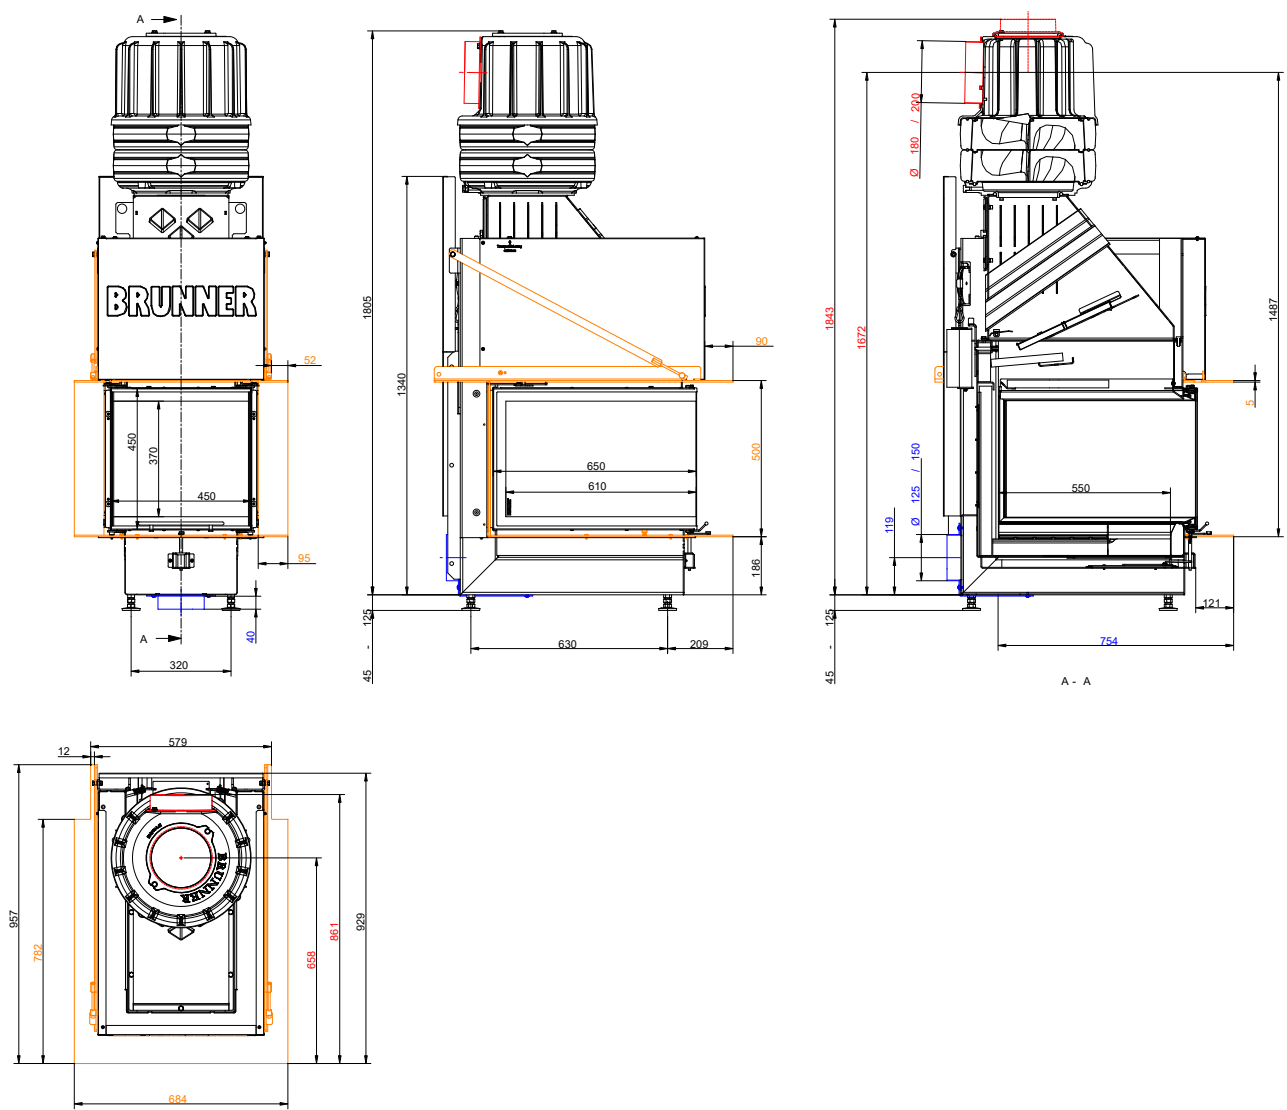


... with steel smoke hood + MAS and wide frame



... Detail wide frame (schematic)

Dimension sheets - BKH Panorama 45-65-45-65 green

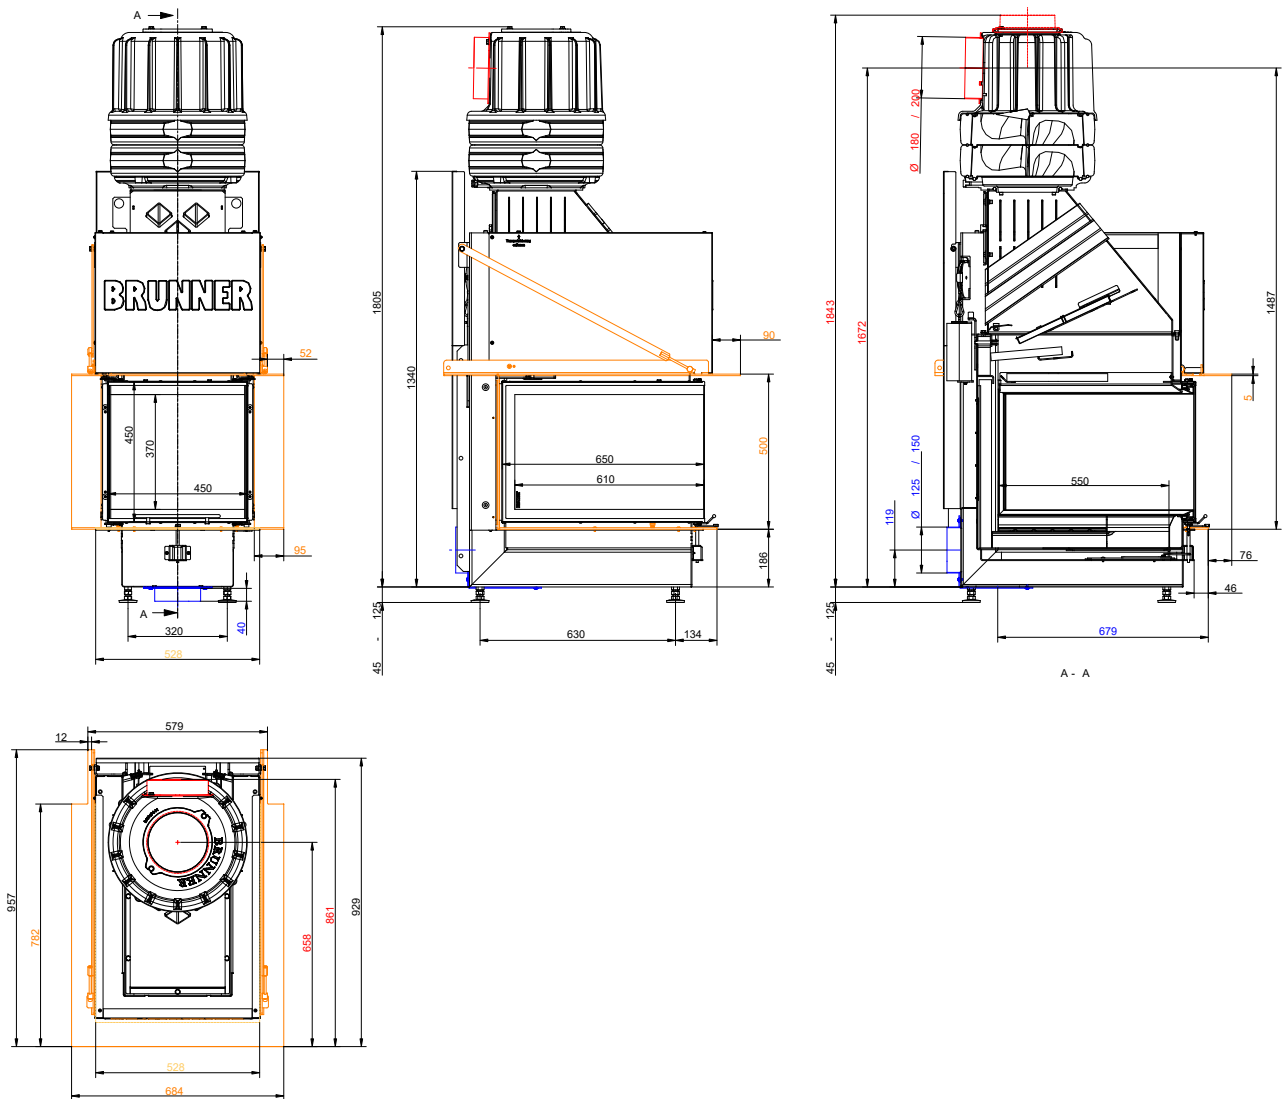

... with steel smoke hood + MAS and Mounting bracket



... Detail of narrow frame (schematic)

We suggest for CAD planning Palette CAD. Permanent updated drawings: www.brunner.de
Frames/ flue gas outlet connection/ combustion air supply connection/ front variants/ support bearing are marked in color.

Planning and installation - BKH Panorama 45-65-45-65 green

Tested according to		EN 13229 W	EN 13229 WA
Values measured at		Rated power ¹⁾	Storage operation ²⁾
Data for functional demonstration			
Rated heat power	kW	10	-
Fire wood volume	kg/h	3.2	4.0
Combustion performance	kW	12	17
Flue gas mass flow	g/s	12	17
Flue gas temperature after:			
steel smoke hood	°C	210	230
2 x accumulation rings incl. MAS casted cover ³⁾	°C	-	180
Necessary supply pressure	Pa	12	12
Fuel amount	kg	2.5	4.0
Combustion air consumption	m³/h	32	42
Combustion air connection Ø	mm	125	125
Heat distribution			
Insert / reheating surface	%	25 / 30	25 / 30
glass ceramic / glass ceramic coated (GKB)	%	45 / 35	45 / 35
Cross-section of gratings ⁴⁾			
exhaust warm air	cm²	700	700
Recirculation air	cm²	700	700
Minimal oven surface for closed construction type			
Heat dissipating surface	m²	4.0	4.0
Minimal distances of the fireplace			
Heat protection panel for cladding, insulation layer	cm	3	3
to cladding, insulation layer	cm	5	5
to the floor (non-combustible)	cm	3	3
Minimum insulation thicknesses of substitute insulation material / reference insulation material + facing wall ⁵⁾			
with heat protection panel for mounting wall (non-combustible) ⁶⁾	cm	6 / 8	6 / 8
with heat protection panel for mounting wall (combustible) ⁶⁾	cm	12 / 13 + 10	12 / 13 + 10
to mounting wall (non-combustible)	cm	8 / 10	8 / 10
to mounting wall (combustible)	cm	18 / 20 + 10	18 / 20 + 10
to the ceiling (non-combustible)	cm	8 / 10	8 / 10
to the ceiling (combustible)	cm	22 / 25 + 10	22 / 25 + 10
to the floor (non-combustible)	cm	0 / 0	0 / 0
Minimum distances in front of the combustion chamber, glass ceramic / glass ceramic coated (GKB)			
for combustible parts	cm	≥ 120 / ≥ 80	≥ 120 / ≥ 80
Weight			
Fireplace insert + combustion chamber inner lining chamotte/cast iron	kg	245 + 35 / 38	
Meets requirement/limit values for:			
EU / Germany		Ecodesign / 1. BImSchV (Stufe 2)	

1) Data on 'nominal output' determined with steel smoke hood 180 mm and installed catalytic converter

2) Information on "Storage operation" for the version with top-mount accumulator MAS.

3) Damper flap recommended


4) Air cross-sections if the specified nominal heat output is desired as the heat output.

5) Fire safety: values determined with air cross-sections evaluated by safety testing; stove cladding is heat emitting. Insulation material data with calcium silicate (Promasil 950KS)/10 cm wall lining + reference insulation material (mineral wool according to AGI Q 132). The specifications for walls/ceilings that do not require protection and are non-combustible correspond to the specifications of TROL (Germany).

6) Heat protection panels (accessories) only available for selected fireplace inserts. For assembly and design of the heat protection panel see assembly instructions. Distance between mounted heat protection panel and fireplace insert: rear wall 2 cm.

Product data sheet according to (EU) 2015/1186:

Supplier's name or trademark	Ulrich Brunner GmbH
Model identifier:	BKH 5.0 Panorama 45-65-45-65 green
Energy efficiency class:	A
Direct heat output:	10,0 kW
Indirect heat output:	N.A. kW
Energy efficiency index:	112
Fuel energy efficiency (at nominal heat output):	85,0 %
Fuel energy efficiency (at minimum load):	N.A. %
Special precautions: see supplied product documentation	

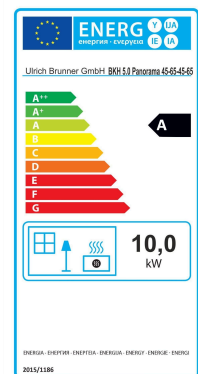**Ulrich Brunner GmbH**

Zellhuber Ring 17-18

D-84307 Eggenfelden

Phone: +49 (0) 8721/771-800

E-Mail: info@brunner.de

Copyright

All information, drawings and technical descriptions contained in this documentation are our property and may not be reproduced without prior written permission.

® **BRUNNER** is a registered trademark.

Subject to technical changes and errors.

© by Ulrich Brunner GmbH

Art.-Nr.: 203042